AXIOMTEK

rBOX120-FL Series

Robust Din-rail Fanless Embedded System

User's Manual

Disclaimers

This manual has been carefully checked and believed to contain accurate information. Axiomtek Co., Ltd. assumes no responsibility for any infringements of patents or any third party's rights, and any liability arising from such use.

Axiomtek does not warrant or assume any legal liability or responsibility for the accuracy, completeness or usefulness of any information in this document. Axiomtek does not make any commitment to update the information in this manual.

Axiomtek reserves the right to change or revise this document and/or product at any time without notice.

No part of this document may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Axiomtek Co., Ltd.

©Copyright 2013 Axiomtek Co., Ltd.

All Rights Reserved

May 2013, Version A1

Printed in Taiwan

Safety Precautions

Before getting started, please read the following important safety precautions.

1. The rBOX120-FL does not come equipped with an operating system. An operating system must be loaded first before installing any software into the computer.
2. Be sure to ground yourself to prevent static charge when installing the internal components. Use a grounding wrist strap and place all electronic components in any static-shielded devices. Most electronic components are sensitive to static electrical charge.
3. Disconnect the power cord from the rBOX120-FL before making any installation. Be sure both the system and the external devices are turned OFF. Sudden surge of power could ruin sensitive components. Make sure the rBOX120-FL is properly grounded.
4. Make sure the voltage of the power source is correct before connecting the equipment to the power outlet.
5. Turn OFF the system power before cleaning. Clean the system using a cloth only. Do not spray any liquid cleaner directly onto the screen.
6. Do not leave this equipment in an uncontrolled environment where the storage temperature is below -45℃ or above 85℃. It may damage the equipment.
7. Do not open the system's back cover. If opening the cover for maintenance is a must, only a trained technician is allowed to do so. Integrated circuits on computer boards are sensitive to static electricity. To avoid damaging chips from electrostatic discharge, observe the following precautions:
   - Before handling a board or integrated circuit, touch an unpainted portion of the system unit chassis for a few seconds. This will help to discharge any static electricity on your body.
   - When handling boards and components, wear a wrist-grounding strap, available from most electronic component stores.

Classification

1. Degree of production against electric shock: not classified
2. Degree of protection against the ingress of water: IP30
3. Equipment not suitable for use in the presence of a flammable anesthetic mixture with air or with oxygen or nitrous oxide.
4. Mode of operation: Continuous
5. Type of protection against electric shock: Class I equipment

General Cleaning Tips

You may need the following precautions before you begin to clean the computer. When you clean any single part or component for the computer, please read and understand the details below fully.

When you need to clean the device, please rub it with a piece of dry cloth.

1. Be cautious of the tiny removable components when you use a vacuum cleaner to absorb the dirt on the floor.
2. Turn the system off before you start to clean up the component or computer.
3. Never drop the components inside the computer or get circuit board damp or wet.
4. Be cautious of all kinds of cleaning solvents or chemicals when you use it for the sake of cleaning. Some individuals may be allergic to the ingredients.
5. Try not to put any food, drink or cigarette around the computer.

Cleaning Tools

Although many companies have created products to help improve the process of cleaning your computer and peripherals users can also use household items to clean their computers and peripherals. Below is a listing of items you may need or want to use while cleaning your computer or computer peripherals.

Keep in mind that some components in your computer may only be able to be cleaned using a product designed for cleaning that component, if this is the case it will be mentioned in the cleaning.

- Cloth: A piece of cloth is the best tool to use when rubbing up a component. Although paper towels or tissues can be used on most hardware as well, we still recommend you to rub it with a piece of cloth.
- Water or rubbing alcohol: You may moisten a piece of cloth a bit with some water or rubbing alcohol and rub it on the computer. Unknown solvents may be harmful to the plastics parts.
- Vacuum cleaner: Absorb the dust, dirt, hair, cigarette particles, and other particles out of a computer can be one of the best methods of cleaning a computer. Over time these items can restrict the airflow in a computer and cause circuitry to corrode.
- Cotton swabs: Cotton swaps moistened with rubbing alcohol or water are excellent tools for wiping hard to reach areas in your keyboard, mouse, and other locations.
- Foam swabs: Whenever possible it is better to use lint free swabs such as foam swabs.

Note

***We strongly recommended that you should shut down the system before you start to clean any single components*.**

Please follow the steps below:

1. Close all application programs
2. Close operating software
3. Turn off power
4. Remove all device
5. Pull out power cable

Scrap Computer Recycling

If the computer equipments need the maintenance or are beyond repair, we strongly recommended that you should inform your Axiomtek distributor as soon as possible for the suitable solution. For the computers that are no longer useful or no longer working well, please contact your Axiomtek distributor for recycling and we will make the proper arrangement.

Trademarks Acknowledgments

Axiomtek is a trademark of Axiomtek Co., Ltd. IBM, PC/AT, PS/2, VGA are trademarks of International Business Machines Corporation.
Intel® and Pentium® are registered trademarks of Intel Corporation.
MS-DOS, Microsoft C and QuickBASIC are trademarks of Microsoft Corporation.
VIA is a trademark of VIA Technologies, Inc.
SST is a trademark of Silicon Storage Technology, Inc.
UMC is a trademark of United Microelectronics Corporation. Other brand names and trademarks are the properties and registered brands of their respective owners.

Table of Contents

Disclaimers ii
Safety Precautions iii
Classification iv
General Cleaning Tips iv
Cleaning Tools v
Scrap Computer Recycling vi

CHAPTER 1 INTRODUCTION 1
1.1 General Description 1
1.2 System Specifications 4
1.2.1 CPU 4
1.2.2 Chipset 4
1.2.3 BIOS 4
1.2.4 System Memory 4
1.2.5 Graphics Chip 4
1.2.6 Video Memory 5
1.2.7 LAN 5
1.2.8 Storage 5
1.2.9 USB 6
1.2.10 COM 8
1.2.11 Power 12
1.2.12 WatchDog Timer (WDT) 13
1.2.13 Digital I/O Connector and Pin Definition 15
1.2.14 System LED 22
1.2.15 Alarm Contact 28
1.2.16 Wireless (3G/GPRS & Wifi) 34
1.2.17 Reset Bottom 34
1.2.18 Operation Temperature 34
1.2.19 Storage Temperature 34
1.2.20 Humidity 34
1.2.21 Weight 34
1.2.22 Dimensions 34
1.2.23 System I/O Outlet 35
1.3 Dimensions 36
1.4 I/O Outlets 37
1.5 Packing List 38

CHAPTER 2 HARDWARE INSTALLATION 39
2.1 Installing the Memory Module 39
2.2 Installing the Hard Disk Drive 43
2.3 Installing Din-rail Mounting 48
2.4 Installing Wall Mounting (optional) 55

CHAPTER 3 PHOENIX-AWARD BIOS UTILITY 57

3.1 Entering Setup 57
3.2 Control Keys.....57
3.3 The Main Menu 58
3.4 Standard CMOS Setup Menu 59
3.5 Advanced BIOS Features 62
3.6 Advanced Chipset Features.....72
3.7 Integrated Peripherals 74
3.8 Power Management Setup 81
3.9 PnP/PCI Configuration Setup.....82
3.10 PC Health Status 88
3.11 Load Optimized Defaults.....89
3.12 Set Supervisor/User Password.....90
3.13 Save & Exit Setup.....92
3.14 Exit Without Saving 93

CHAPTER 1
INTRODUCTION

This chapter contains general information and detailed specifications of the rBOX120-FL. The Chapter 1 includes the following sections:

- General Description
- System Specification
- Dimensions
- I/O Outlets
- Package List

1.1 General Description

The rBOX120-FL Din-rail fanless embedded systems are suitable for communications control and for protocol converter applications in critical environments. Built for rugged work environments, the rBOX120-FL series features an extra low power consumption Intel® ATOM™ Z510PT (1.1 GHz) or Z520PT (1.33 GHz) processors supporting industrial temperature range of -40℃ to +70℃. Their front accessible I/O cabling is very convenient for wiring and maintenance. The rBOX120-FL series offers a VGA output, making it particularly well-suited for communication control, SCADA and industrial automation. Its compact size with Din-rail mounting allows for easy installation into control cabinet. Pre-installed with Linux, Windows® CE 6.0. Windows® 7 embedded or Windows® XP embedded, the rBOX120-FL series provides programmers with a friendly environment for developing application software at a lower cost.

The rBOX120-FL is robust industrial-grade hardware design and adopts the advanced cooling system, besides, supporting the CompactFlash™, which makes it especially suitable for field control & monitoring system solution for following markets:

- Utility Industries (Water; Energy; Chemical Plant; Mining…)
- Public Transportation Industries (Traffic/ Highway Control; Train/Bus Control …)
- Homeland Security (Weather Monitoring/Alarm System …)

➢ Features

1. Fanless and no internal cabling design
2. Wide temperature operation of -40℃ - +70℃
3. Supports 3 10/100/1000 Ethernets with Magnetic Isolation Protection
4. 2 Isolation COM Ports
5. 1 Isolation DIO Ports (8-In/8-Out) with Dry/Wet contacts
6. 2 Watchdog Timers
7. LED Indicators (Power, Alarm, Ready/Active, COM (TXD,RXD))
8. 2 Wireless (3G/GPRS & Wifi)
9. SNMP V1/V2c
10. Support one 2.5" SATA SSD (or HDD) and one CompactFlash™
11. 2 power paths with terminal block and 12–48VDC
12. Din-rail mounting
13. Wall mounting (optional)
14. Meet safety agency requirements (UL508,UL60950-1), passed heavy industrial CE & FCC Part 18 Class A and pre-tested okay EN50121-4 (for Railway application)

➢ Embedded O.S. Supported

The rBOX120-FL not only supports Windows® XP, but also supports embedded OS, such as Windows® XP embedded, Windows® 7 embedded, Windows® CE 6.0 and Linux. For storage device, the rBOX120-FL supports one type II CompactFlash™ slot.

- Intelligent AXView & SNMP V1/V2c

  The rBOX120 features SNMP V1/V2c support for secured network management. To streamline implementation of management applications, Axiomtek has launched exclusive "AXView" monitoring software package for customers to build their own management systems easily and quickly. Axiomtek AXView also contains a variety of easy-to-use management utilities, agent services and libraries. For more product information, please visit our global website on Axiomtek AXView

  http://axiomtek.com/products/ViewProduct.asp?view=1001

1.2 System Specifications

1.2.1 CPU

- Onboard Intel® ATOM™ Z510PT (1.1 GHz) or Z520PT (1.33 GHz) processors with FSB 400/533MHz.

1.2.2 Chipset

- Intel System Controller Hub US15WPT

1.2.3 BIOS

- Phoenix AwardBIOS

1.2.4 System Memory

- One 200-pin SO-DIMM support DDR2 400/533MHz max. up to 2GB

1.2.5 Graphics Chip

- Intel GMA500 graphics Core integrate in US15W PT
- DB15 VGA port
- VGA IO Pin Define :

Pin	Signal	Pin	Signal	Pin	Signal
1	Red	2	Green	3	Blue
4	N.C.	5	GND	6	DETECT
7	GND	8	GND	9	VCC
10	GND	11	N.C.	12	DDC DATA
13	Horizontal Sync	14	Vertical Sync	15	DDC CLK



1.2.6 Video Memory

- Share Memory max. up to 254MB

1.2.7 LAN

- LAN 1 / LAN 2 / LAN 3
  - GBE Intel 82574, 10/100/1000Mbps LAN w/ Magnetic Isolation Protection 1.5KV
  - LED definition: Active LED (Yellow flashing), 10 LAN LED (NO Light), 100 LAN LED (Green Light), 1000 LAN LED (Orange Light)

GbE(10M/100M/1000M)

Pin	Signal
1	MDI0+
2	MDI0-
3	MDI1+
4	MDI1-
5	MDI2+
6	MDI2-
7	MDI3+
8	MDI3-
A	Active LED (Yellow)
B	100 LAN LED (Green)/ 1000 LAN LED (Orange)

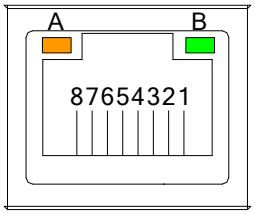

1.2.8 Storage

- 1 x 2.5" SATA SSD (or HDD) drive bay
- 1 x CompactFlash TypeII slot (easy-to- access)

1.2.9 USB

- 2 x USB2.0
- With power distribution control and over current protection
- USB Pin Define :

Pin	Signal USB Port 0	Pin	Signal USB Port 1
1	USB VCC (+5V level)	5	USB VCC (+5V level)
2	USB #0_D-	6	USB #1_D-
3	USB #0_D+	7	USB #1_D+
4	Ground (GND)	8	Ground (GND)

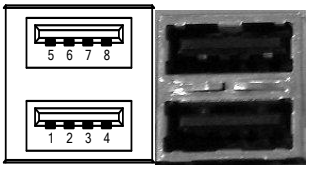

- USB power (5V) distribution control.

  Some program and sample code for USB power distribution control are offered in Windows and Linux.

  - Windows: Please refer it from our Axiomtek AXView which on *Axiomtek's website* directly.

  - Linux : Please refer it from our Axiomtek's website directly.

➢ **Axiomtek's website for AXView :**

http://axiomtek.com/products/ViewProduct.asp?view=1001

AXView Version → Sample Code → C (or C#) → AXView

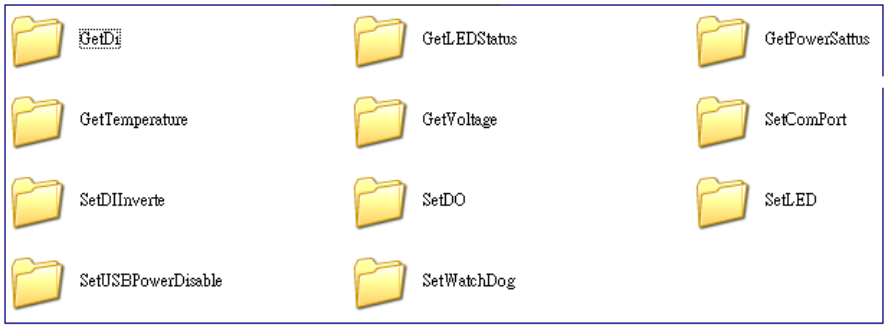

- **Axiomtek's website for Linux :**

  http://www.axiomtek.com/products/ViewProduct.asp?view=1075

USB Power Distribution Control Sample code:

- **Windows:**

\AXView Version\Samplecode\c\AXView\SetUSBPowerDisable \AXVIEW_DLL_Test.cpp

- **Linux:**

\rBox120-bsp-user-1.0.0\rbox120\src\librb100.c

int _rb201_usb_power(int number, int onoff)

1.2.10 COM

- 2 ports DB9 Pin Define RS-232/422/485
- ESD Protection 15KV
- Magnetic Isolation Protection 2KV
- COM1,COM2 speed up to 115.2kbps
- rBOX support jumper less design. All of the COM port interface RS232/422/485 can be selected by BIOS menu or software program.
- It also supports Auto Flow Control in RS485 mode
- Serial Port Pin Define : (DB9 Male)

rBOX120

COM1/COM2

Pin	RS-232	RS-422	RS-485
1	DCD	TX-	Data-
2	RXD	TX+	Data+
3	TXD	RX+	--
4	DTR	RX-	--
5	Ground	Ground	Ground
6	DSR	--	--
7	RTS	--	--
8	CTS	--	--
9	RI	--	--

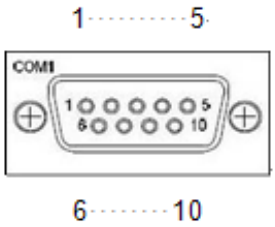

- Some program and sample code for COM port interface type are offered in Windows and Linux.

  - Windows:Please refer it from our Axiomtek AXView which on Axiomtek's website directly.

  - Linux : Please refer it from our *Axiomtek's website* directly.

- **Axiomtek's website for AXView :**

http://axiomtek.com/products/ViewProduct.asp?view=1001

AXView Version → Sample Code → C (or C#) → AXView

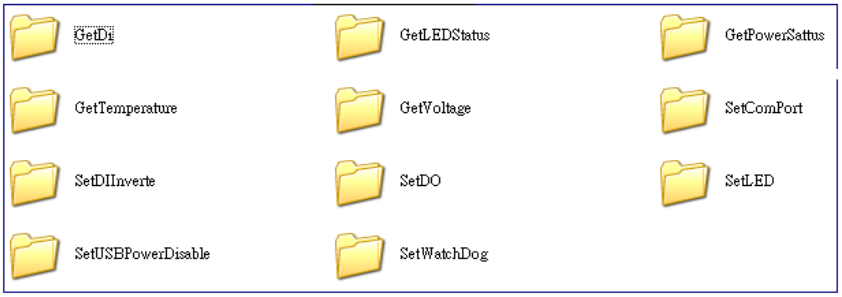

- **Axiomtek's website for Linux :**

http://www.axiomtek.com/products/ViewProduct.asp?view=1075

COM port interface selection Sample Code :

-Set COM port interface type(Windows, Linux)

- **Windows:**

-RS232/422/485 interface selection:

\AXView Version\Sample code\c\AXView\SetComPort\ AXVIEW_DLL_Test.cpp

- **Linux:**

-RS232/422/485 interface selection:

\rBox120-bsp-user-1.0.0\rbox120\src\librb100.c

int _rb210_set_comport(int number, int type)

http://www.axiomtek.com/products/ViewProduct.asp?view=1075

1.2.11 Power

- 2 power paths
- 2 power sources must be same voltage and DC input range 12-48V.
- Main power source is for Input Power Path 1, Backup power source is for Input Power Path 2.
- Only one power source must be for Input Power Path 1.
- DC Input has UVP/OVP/Reverse protection.
- Reset Button without Power Switch
- DC Terminal Block

Pin	DC Signal Name
1	AL-
2	AL+
3	SG
4	SG
5	GND
6	DC2
7	GND
8	DC1

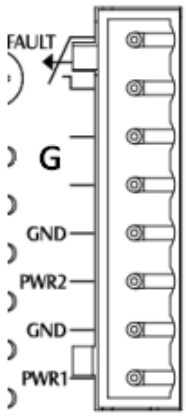

Note

1. ***If 2 power sources aren't same voltage and the system will be possible damage.***
2. ***When the system is shoutdown after, if users press the Reset Button for 3 seconds and the system will be restarted.***

1.2.12 WatchDog Timer (WDT)

- rBox support two Watchdog timers. Those can cause system reset when timer expired.
- WDT 1 : one step is 1sec, 255 levels

  WDT 2 : one step is 250ms, 255 levels
- Some program and sample code for two Watchdog timers are offered in Windows and Linux.

  - Windows : Please refer it from our Axiomtek AXView which on *Axiomtek's website* directly.

  - Linux : Please refer it from our *Axiomtek's website* directly.

➢ **Axiomtek's website for AXView :**

http://axiomtek.com/products/ViewProduct.asp?view=1001

AXView Version → Sample Code → C (or C#) → AXView

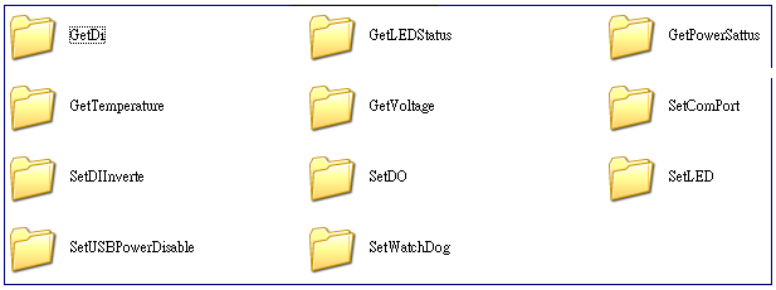

➢ **Axiomtek's website for Linux :**

http://www.axiomtek.com/products/ViewProduct.asp?view=1075

Watch Dog Timer Sample code:

-Super IO(Linux)

-CPLD(Windows, Linux)

- **Windows:**

-CPLD:

\AXView Version\Sample code\c\AXView\SetWatchDog\ AXVIEW_DLL_Test.cpp

- **Linux:**

\rBox120-bsp-user-1.0.0\rbox120\src\librb100.c

-Super IO:

int _rm820_WDT_enable(unsigned char scale, unsigned char timeout)

int _rm820_WDT_disable(void)

int _rm820_WDT_reload(void)

int _rm820_read_WDT_config(unsigned int *time)

-CPLD:

unsigned char _rb210_get_WDT_value(void)

int _rb210_WDT_enable(unsigned char timeout)

int _rb210_WDT_disable(void)

1.2.13 Digital I/O Connector and Pin Definition

- 8bit DI and 8bit DO
- 3KV optical isolation
- DIO Design Specification

Digital Input	
Input Channels	8,source type
Input Voltage	0 to 24VDC
Digital Input Levels for Dry Contacts	Logic level 0:Close to GND Logic level 1:Open
Digital Input Levels for Wet Contacts	Logic level 0:+10V to +24V (DI To XIN_COM-) Logic level 1:+3V max.
Digital Output	
Output Channels	8,sink type
Output Current	Max. 200 mA per channel
On-state Voltage	24VDC nominal, open collector to 30V

I

- Some program and sample code for DIO are offered in Windows and Linux.

  - Windows : Please refer it from our Axiomtek **AXView** which on *Axiomtek's website* directly.

  - Linux : Please refer it from our *Axiomtek's website* directly.

➢ **Axiomtek's website for AXView :**

http://axiomtek.com/products/ViewProduct.asp?ptype3=268&pos=1&ptype2=229&ptype1=209

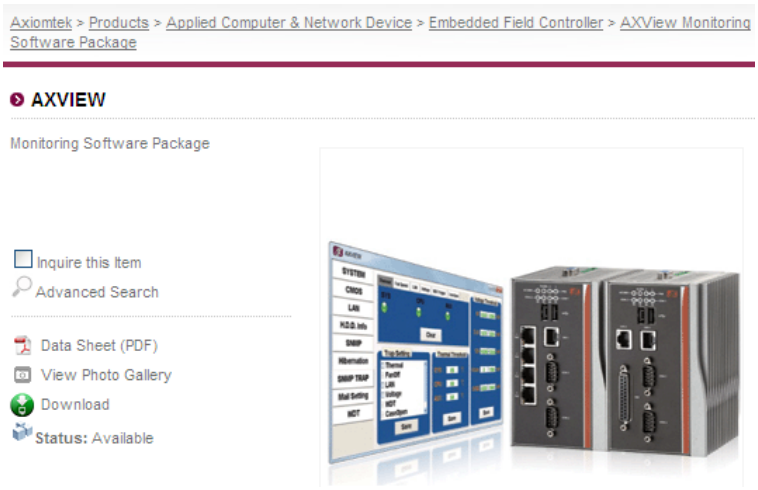
Axiomtek > Products > Applied Computer & Network Device > Embedded Field Controller > AXView Monitoring Software Package
AXVIEW
Monitoring Software Package
Inquire this Item
Advanced Search
Data Sheet (PDF)
View Photo Gallery
Download
Status: Available

AXView Version → Sample Code → C (or C#) → AXView

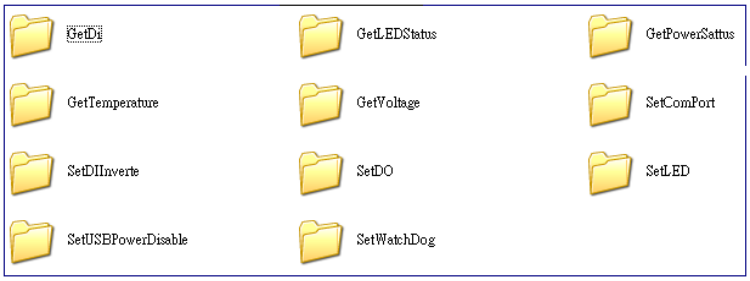

- **Axiomtek's website for Linux :**

http://www.axiomtek.com/products/ViewProduct.asp?view=1075

GPIO control

DI:

- Get the DI register (Windows, Linux)
- Set DI polarity (Windows)

DO:

- Get DO register (Linux)
- Set DO register (Windows, Linux)

DI/DO Sample Code :

- **Windows:**

-Set DI polarity:

\AXView Version\Sample code\1.0.2\c\SetWatchDog\ AXVIEW_DLL_Test.cpp

-Get DI:

\AXView Version\Sample code\1.0.2\c\GetDi\ AXVIEW_DLL_Test.cpp

-Set DO:

\AXView Version\Sample code\1.0.2\c\SetDO\ AXVIEW_DLL_Test.cpp

- **Linux:**

\rBox120-bsp-user-1.0.0\rbox120\src\librb100.c

-Get DI:

int _ax93612_read_DI(unsigned char *data)

-Get DO:

int _ax93612_read_DO(unsigned char *data)

-Set DO:

int _ax93612_write_DO(unsigned char data)

Note

The updated latest version of AXView and Linux will be released on Axiomtek's global website directly.

- **DIO 8 in & out of DB25 Female**

Pin	Function	Pin	Function
1	NC	2	XIN00
3	XIN02	4	XIN04
5	XIN06	6	XIN_COM+
7	XIN_COM-	8	NC
9	XOUT06	10	XOUT04
11	XOUT02	12	XOUT00
13	XOUTCOM+	14	NC
15	XIN01	16	XIN03
17	XIN05	18	XIN07
19	NC	20	NC
21	XOUT07	22	XOUT05
23	XOUT03	24	XOUT01
25	XOUTCOM-		

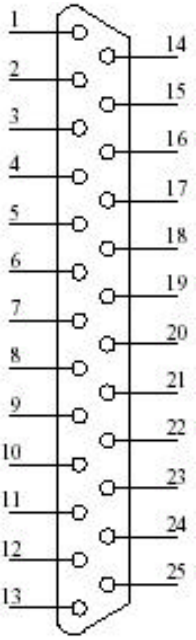

- **Remark:**

Signal Name	Meaning
XINCOM+	Plus common for Input Group
XINCOM-	Minus common for Input Group
XIN00~07	Input Group
NC	Not connection
XOUTCOM-	Minus common for Output Group
XOUTCOM+	Plus common for Output Group
XOUT00~07	Output Group

■ DIO operation schematic diagram

Reference 1.

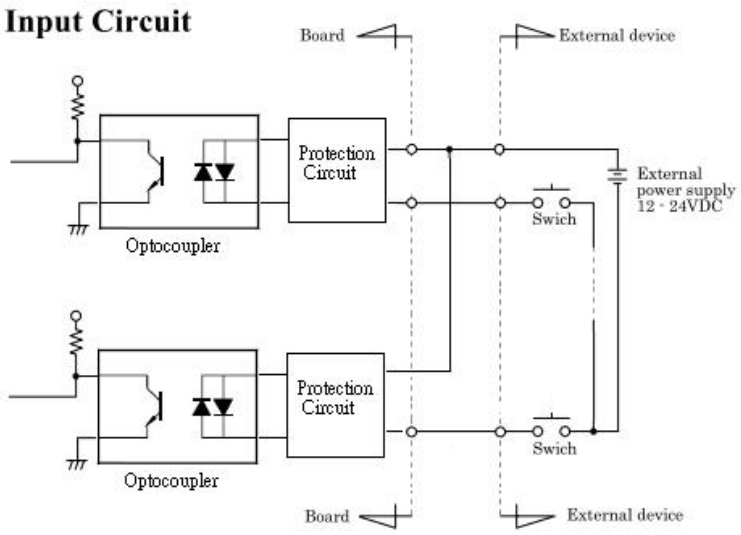

Reference 2.

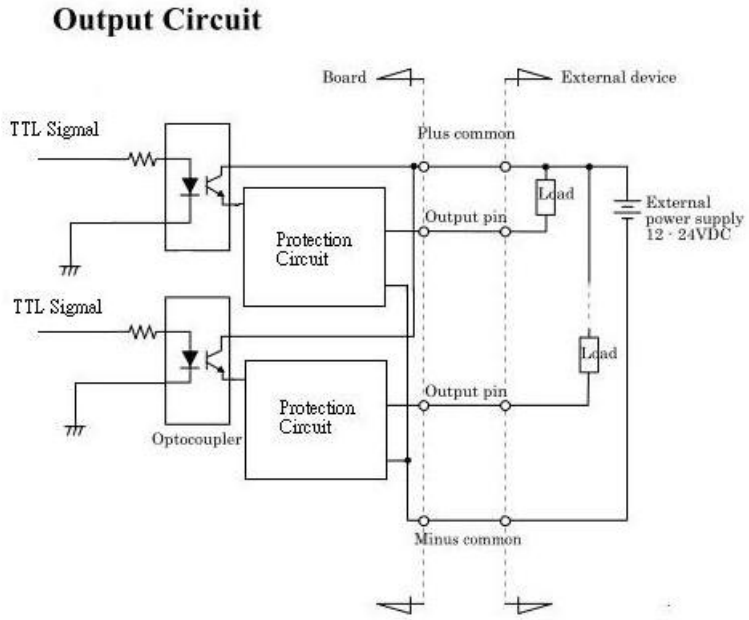

Reference 3

Digital Input Wiring

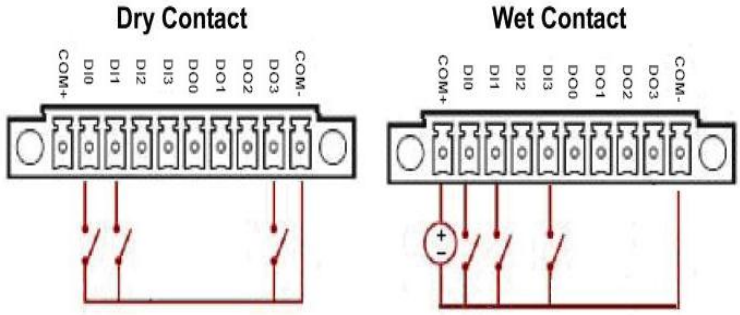

Note: If you are using wet contacts, you must connect **COM** to power.

Reference 4

Digital Output Wiring

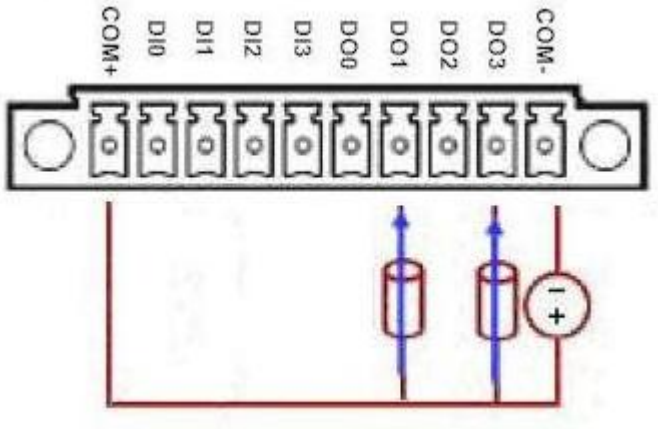

- **rBOX120 How to control /program the I/O**

Q:How to Read DI Port?↵

>debug↵

-o 5000h 00↵

-o 5001h 10↵

-o 5002h 00↵

-o 5003h 00↵

-i 5004h↵

FF(Default Value)↵

Q:How to Write DO Port?↵

>debug↵

-o 5000h 80↵

-o 5001h 10↵

-o 5002h 00↵

-o 5003h 00↵

-o 5004h FF↵

Q:How to Read DO Port?↵

>debug↵

-o 5000h 80↵

-o 5001h 10↵

-o 5002h 00↵

-o 5003h 00↵

-i 5004h↵

FF↵

1.2.14 System LED

For maintenance issue, IO board will have below LED.

1. DC PWR1 : Green
2. DC PWR2 : Green
3. Alarm : Red
4. OS Ready : Yellow
5. COM TX1 : Green
6. COM RX1 : Green
7. COM TX2 : Green
8. COM RX2 : Green

LED Name	Description	Color	Note
DC PWR1	Indicate the DC1 input status. When the DC input is acceptable, the LED will ON.	Green	
DC PWR2	Indicate the DC2 input status. When the DC input is acceptable, the LED will ON.	Green	
Alarm	The LED will ON if having below condition. 1. DC PWR1 or PWR2 is lost. (default) 2. User define event. The behavior of Alarm and Relay are the same. When the LED of Alarm is ON and the Relay will be turn on at the same time.	Red	
RDY/ACT	The LED for RDY/ACT can help users to judge BIOS finish or not and the OS can normal work or not. When the BIOS finish the configuration of system, the LED will ON. After this the LED will flash when the storage is accessed. - The LED will flash when the storage is accessed. - The LED always ON without any flash for a long time, the OS is possible crashed. - The LED isn't ON for a long time, it means the system is on shutdown status.	Yellow	
COM TX1	When COM1 transmit data the LED will on.	Green	
COM RX1	When COM1 receive data the LED will on.	Green	
COM TX2	When COM2 transmit data the LED will on.	Green	
COM RX2	When COM2 receive data the LED will on.	Green	

Note

When the system is shoutdown after, if users press the Reset Button for 3 seconds and the system will be restarded.

- Some program and sample code for Alarm LED and Relay Output are offered in Windows and Linux.

  - Windows : Please refer it from our Axiomtek AXView which on *Axiomtek's website* directly.

  - Linux : Please refer it from our *Axiomtek's website* directly.

- Alarm LED and Relay output Sample Code:

  - Set Alarm LED and Relay status(Windows, Linux)

  - Get Alarm LED and Relay status(Windows, Linux)

  - Get Power status(Windows, Linux)

- **Windows:**

-Get the LED status:

\AXView Version\Samplecode\c\AXView\GetLEDStatus \AXVIEW_DLL_Test.cpp

-Set the LED status:

\AXView Version\Samplecode\c\AXView\SetLED \AXVIEW_DLL_Test.cpp

-Get Power Status:

\AXView Version\Sample code\c\AXView\GetPowerSattus \AXVIEW_DLL_Test.cpp

- **Linux:**

\rBox120-bsp-user-1.0.0\rbox120\src\librb100.c

-Get the LED status:

int _rb210_get_power_usr_alarm_status(void)

-Set the LED status:

int _rb210_power_alarm_ctl(int onoff)

-Get Power Status:

int _rb210_read_power_status(int number)

- **Axiomtek's website for AXView :**

AXView Version → Sample Code → C (or C#) → AXView

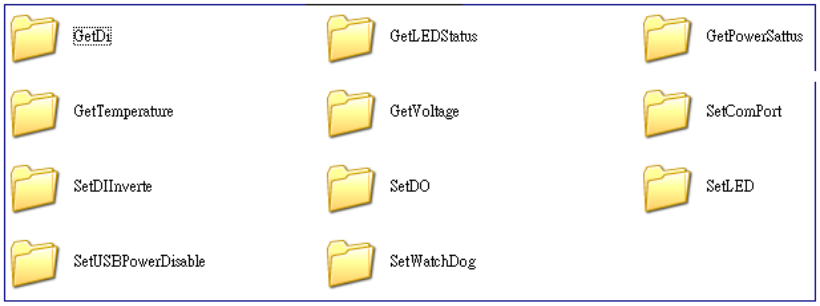

- **Axiomtek's website for Linux :**

http://www.axiomtek.com/products/ViewProduct.asp?view=1075

Below pictures are the LED example:

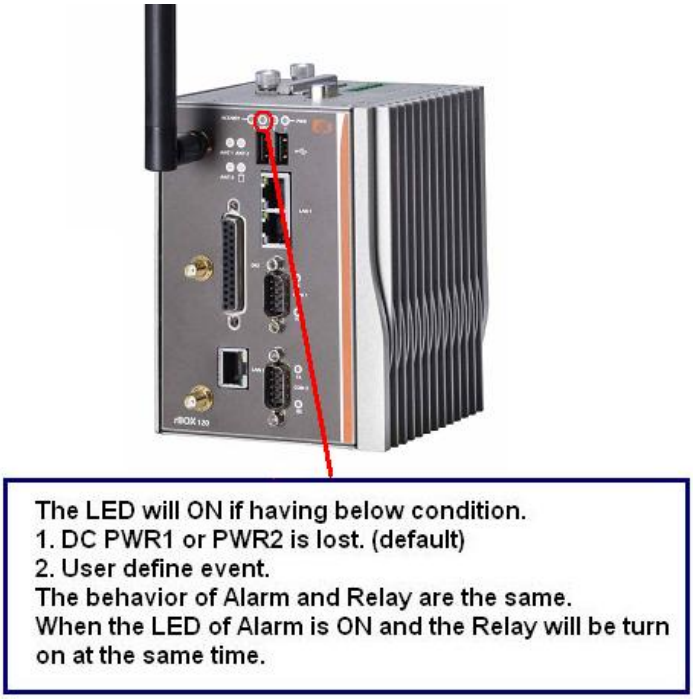
The LED will ON if having below condition.
1. DC PWR1 or PWR2 is lost. (default)
2. User define event.
The behavior of Alarm and Relay are the same.
When the LED of Alarm is ON and the Relay will be turn on at the same time.

Because the PWR1 is still linked, so, the LED of PWR1 is still ON.

When the system is shut down, the LED of ACT/RDY will not ON.

When the BIOS finish the configuration of system, the LED of ACT/RDY will ON.
After the LED of ACT/RDY will flash when the storage is accessed.

1.2.15 Alarm Contact

- The rBox can support two DC power source. When lost one of them will cause Alarm LED on and trigger Relay out for remote notice.
- We also provide the register for user to define their event for trigger the Alarm LED and Relay. Alarm LED and Relay output have the same activity depend on DC status and register control.
- 1 relay output
- Relay output with 0.5A @ 30VDC
- Event : Power Fail and User define
- Some program and sample code for Alarm LED and Relay Output are offered in Windows and Linux.

  - Windows : Please refer it from our Axiomtek AXView which on *Axiomtek's website* directly.

  - Linux : Please refer it from our *Axiomtek's website* directly.

- **Axiomtek's website for AXView :**

http://axiomtek.com/products/ViewProduct.asp?view=1001

AXView Version → Sample Code → C (or C#) → AXView

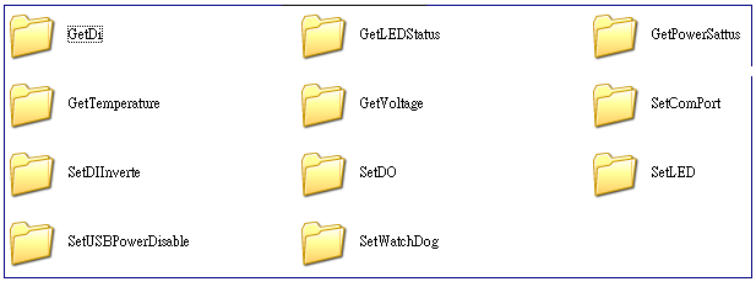

- **Axiomtek's website for Linux :**

http://www.axiomtek.com/products/ViewProduct.asp?view=1075

Alarm LED and Relay output Sample Code:

- Set Alarm LED and Relay status(Windows, Linux)
- Get Alarm LED and Relay status(Windows, Linux)
- Get Power status(Windows, Linux)

- **Windows:**

-Get the LED status:

\AXView Version\Samplecode\c\AXView\GetLEDStatus \AXVIEW_DLL_Test.cpp

-Set the LED status:

\AXView Version\Samplecode\c\AXView\SetLED \AXVIEW_DLL_Test.cpp

-Get Power Status:

\AXView Version\Sample code\c\AXView\GetPowerSattus \AXVIEW_DLL_Test.cpp

- Linux :

-Get the LED status:

int _rb210_get_power_usr_alarm_status(void)

-Set the LED status:

int _rb210_power_alarm_ctl(int onoff)

-Get Power Status:

int _rb210_read_power_status(int number)

➢ **rBOX Alarm Application:**

Troubleshooting is very important in many applications.

In the rBox series we can provide three kinds of way for troubleshooting.

- Alarm LED
- Relay out
- SNMP through AXView

1. Maintenance Staff can check the Alarm LED for basic troubleshooting

2. Relay output

   Below is a very simple application for remote notice use relay and lamp.

   a) Normal

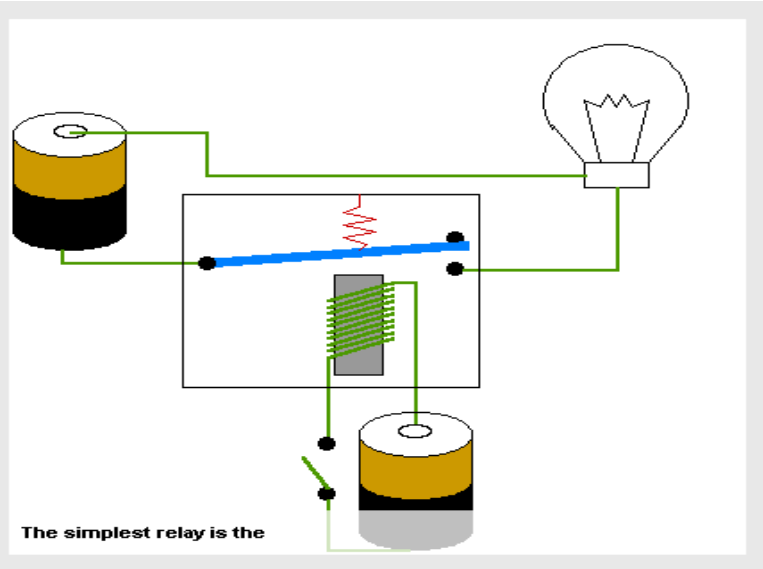

   b) Warning

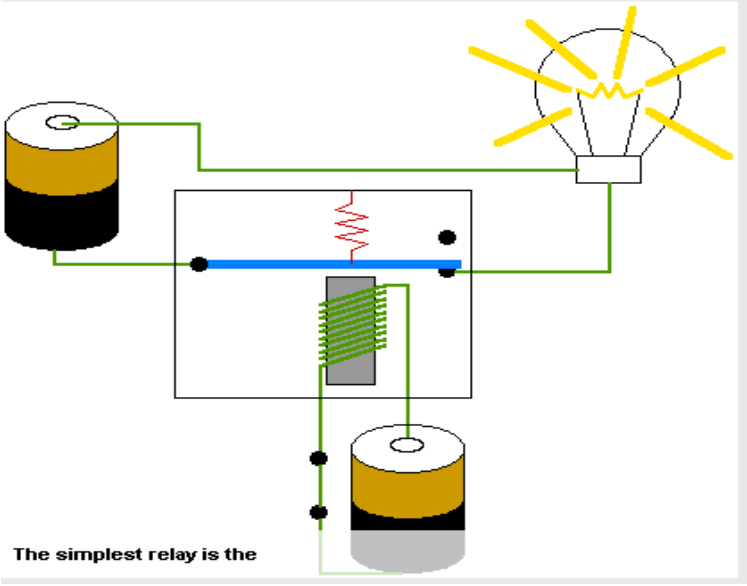

c) Relay wiring of rBox

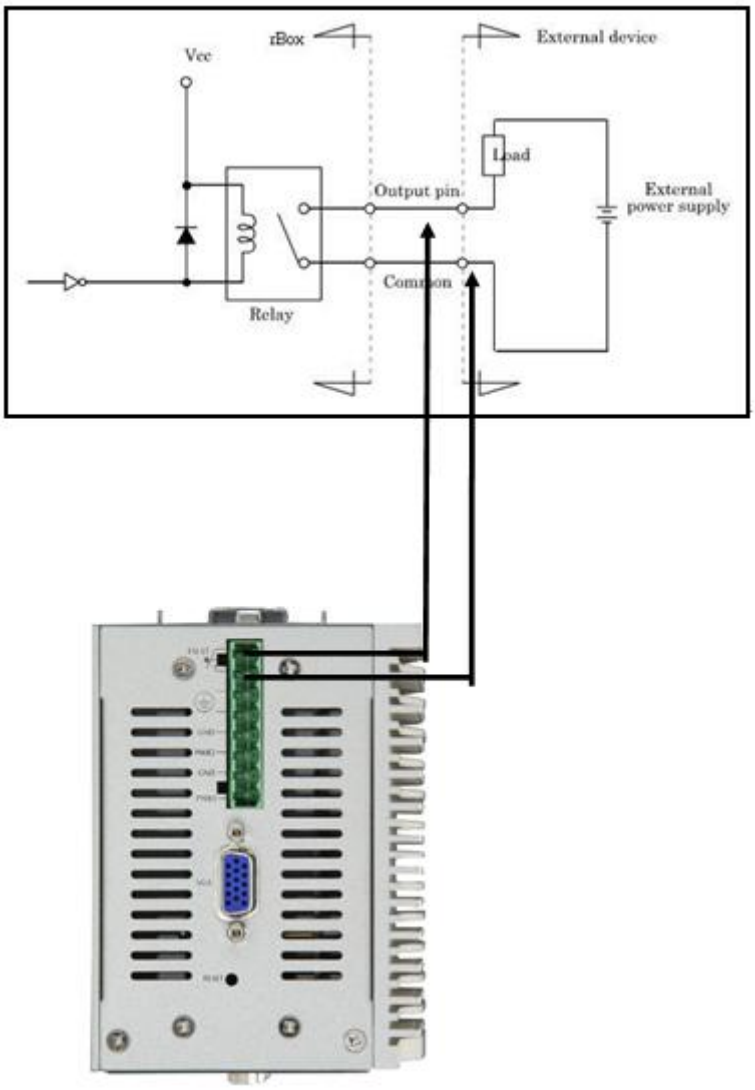

3. SNMP

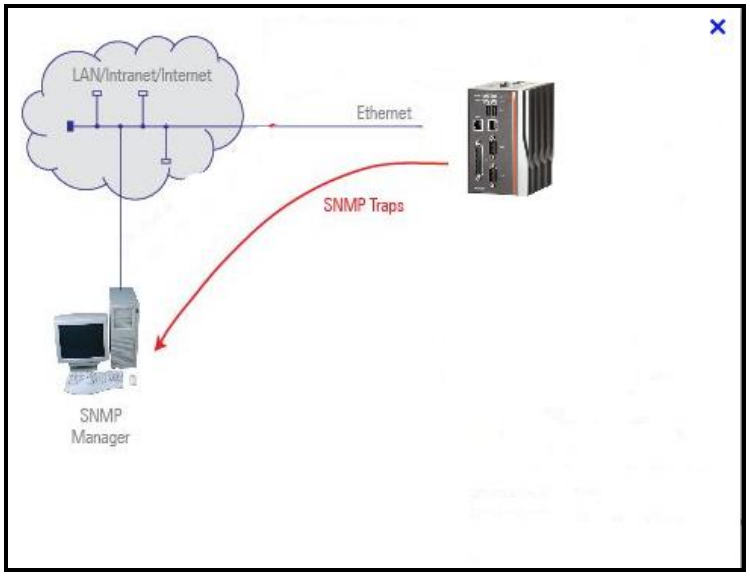

1.2.16 Wireless (3G/GPRS & Wifi)

- 1 x Full size Mini Card (Only supports USB interface on 3G/GPRS)
- 1 x Half size Mini Card (Supports PCIe ans USB interface on Wifi)
- 1 x SIM Card Socket (easy-to-access).

1.2.17 Reset Bottom

- 1 x Reset bottom

Note ***When the system is shoutdown after, if users press the Reset Button for 3 seconds and the system will be restarted.***

1.2.18 Operation Temperature

- -40℃ ~ +70℃ (-40 ºF ~ +158ºF), with W.T. (Memory, CF, SSD/HDD)

1.2.19 Storage Temperature

- -45℃ ~ +85℃ (-49 ºF ~ +185ºF)

1.2.20 Humidity

- 5% ~ 95% (non-condensation)

1.2.21 Weight

- 1.38 kg (3 lb) for rBOX120

1.2.22 Dimensions

- 100.6mm(3.18") (W) x110mm(4.33") (D) x135mm(5.31") (H)

1.2.23 System I/O Outlet

- Two 9-pin D-Sub male connectors, COM1~COM2
- One 15-pin D-Sub female connector for VGA
- Three 10/100/1000Mbps Ethernet with Magnetic Isolation Protection
- Two USB 2.0 connectors
- Two DC Powers Input with terminal block
- Alarm Contact
- Two Wirelesses (3G/GPRS & WiFI)

Note

All specifications and images are subject to change without notice.

1.3 Dimensions

The following diagrams show you dimensions and outlines of the rBOX120-FL

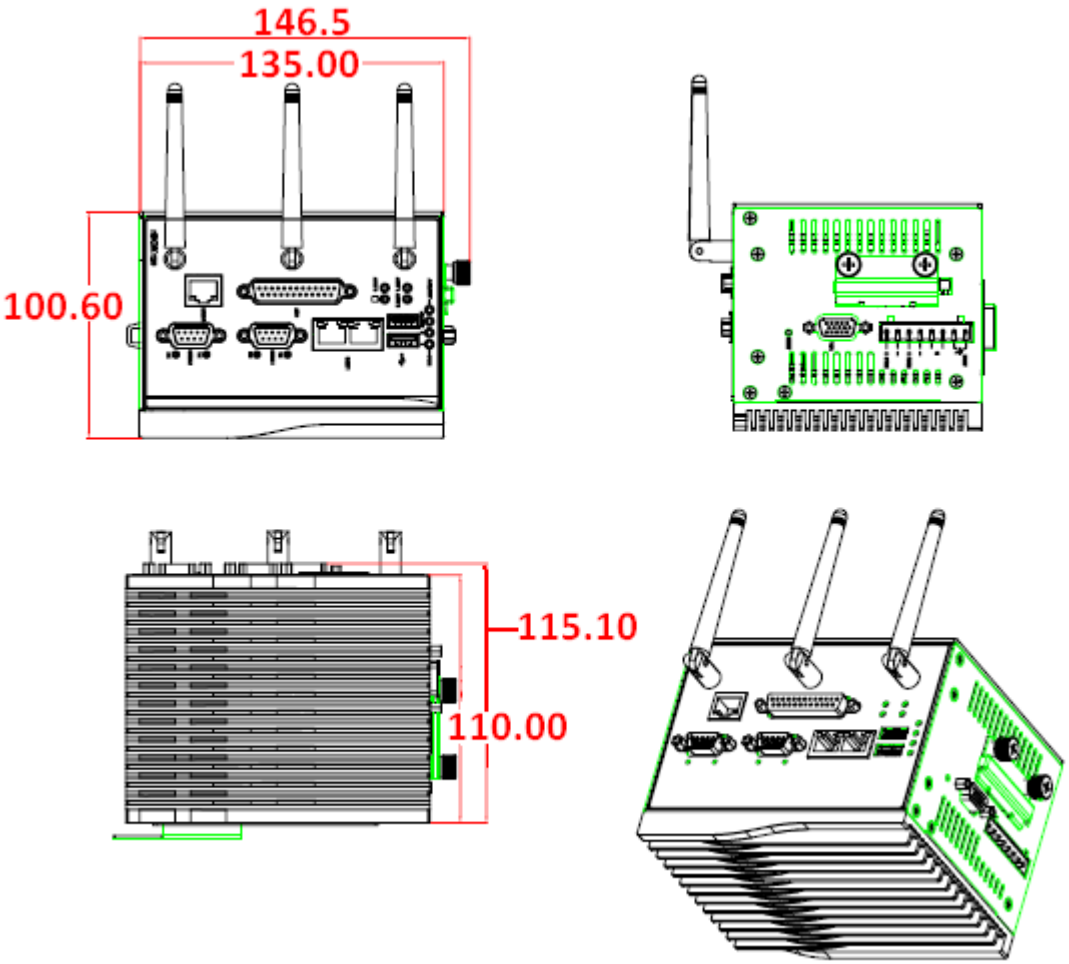

1.4 I/O Outlets

The following figures show you I/O outlets on front view and top view of the rBOX120-FL.

- **Front View**

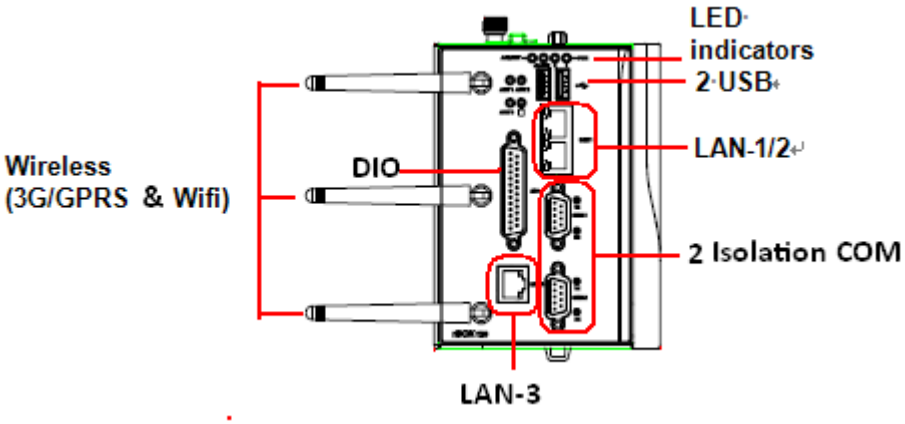

- **Top View**

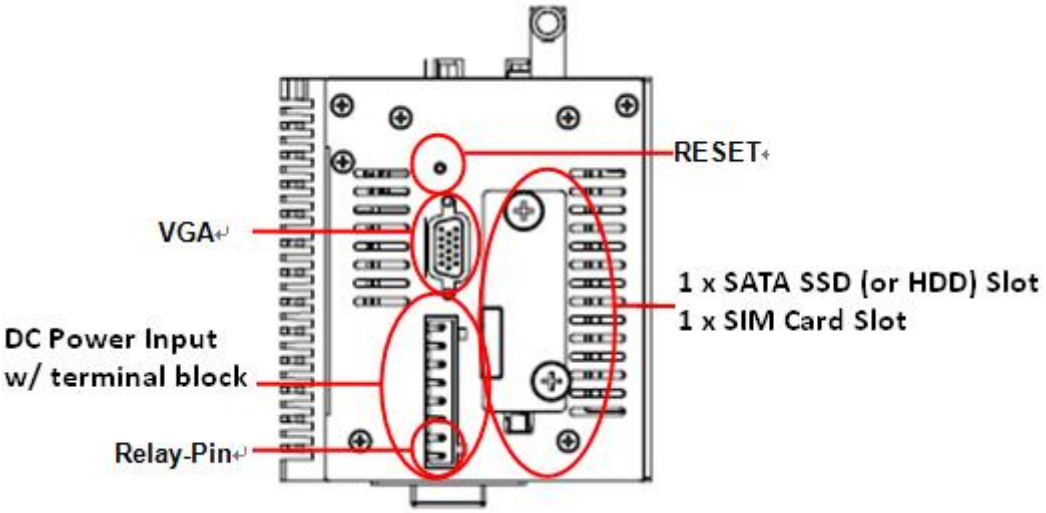

1.5 Packing List

The package bundled with your rBOX120-FL should contain the following items:

- rBOX120-FL System Unit x 1
- CD x 1 (For Driver and User's Manual)
- Power terminal block x1
- Din-rail kit x1
- Screws
- Quick Manual x1

CHAPTER 2
HARDWARE INSTALLATION

The rBOX120-FL is convenient for your various hardware configurations, such as Memory Module and CompactFlash™ card. The chapter 2 will show you how to install the hardware. It includes:

2.1 Installing the Memory Module

Step 1 Turn off the system.

Step 2 Loosen these screws, and remove the top cover from the system.

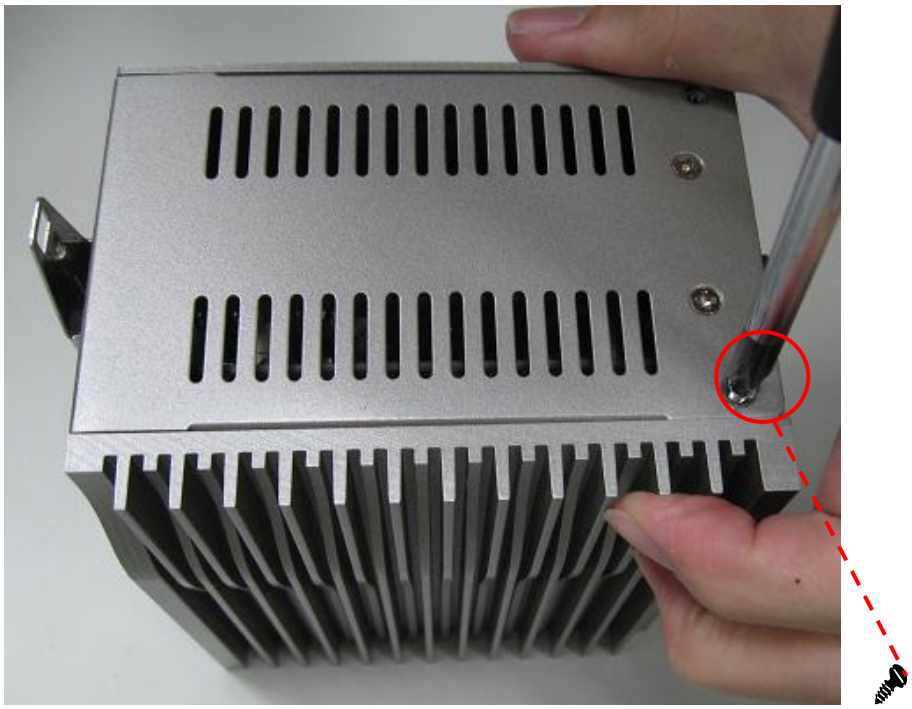

Step 3 **Hold one side of the module, and insert the gold colored contact into the socket. Push the module down.**

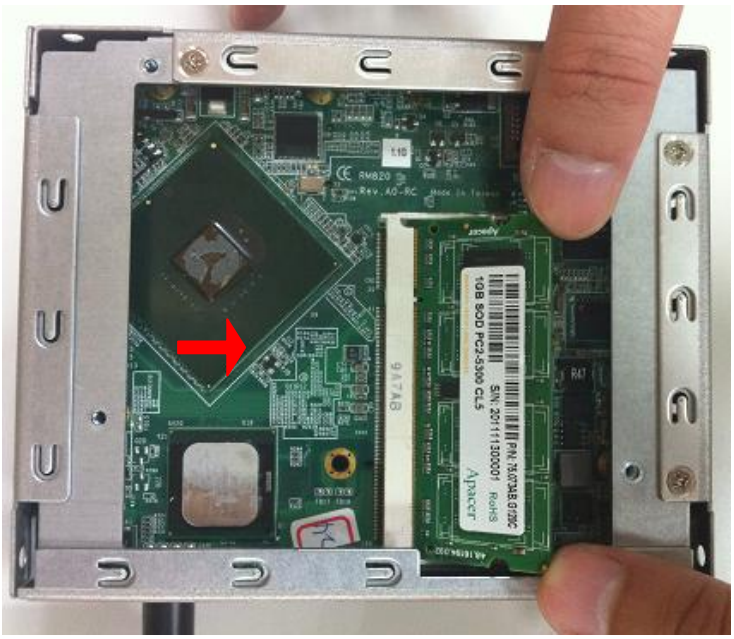

Step 4 **The memory module is locked by two latches on the sides.**

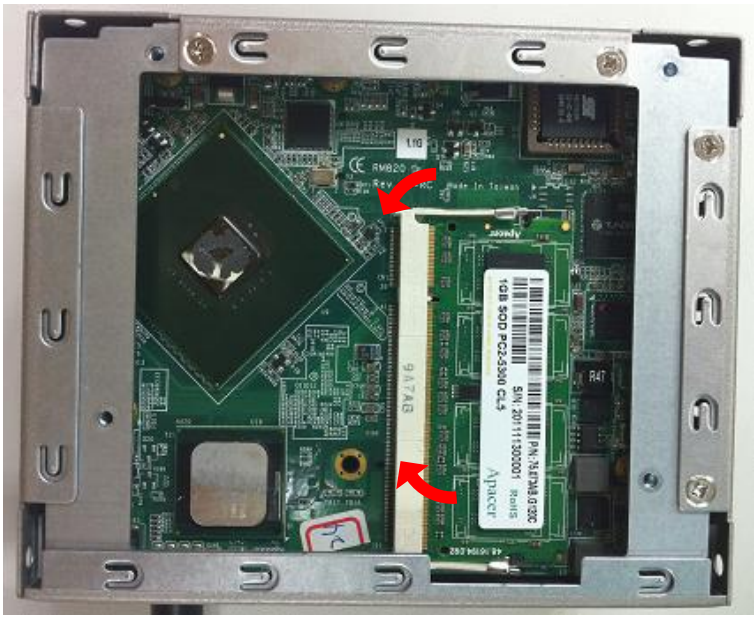

Step 5 Put the cover back to the system, and fasten screws tight close the chassis.

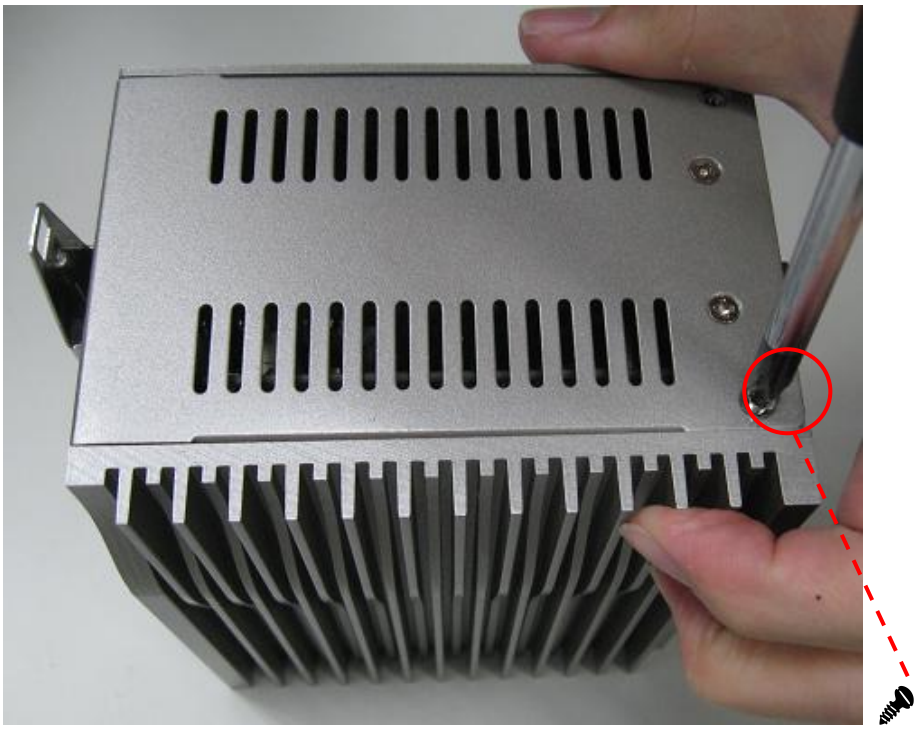

2.2 Installing the Hard Disk Drive

Step 1 Turn off the system.
Step 2 Loosen these screws, and remove the cover from the system.

Step 3 Locate the Hard Disk Drive socket.

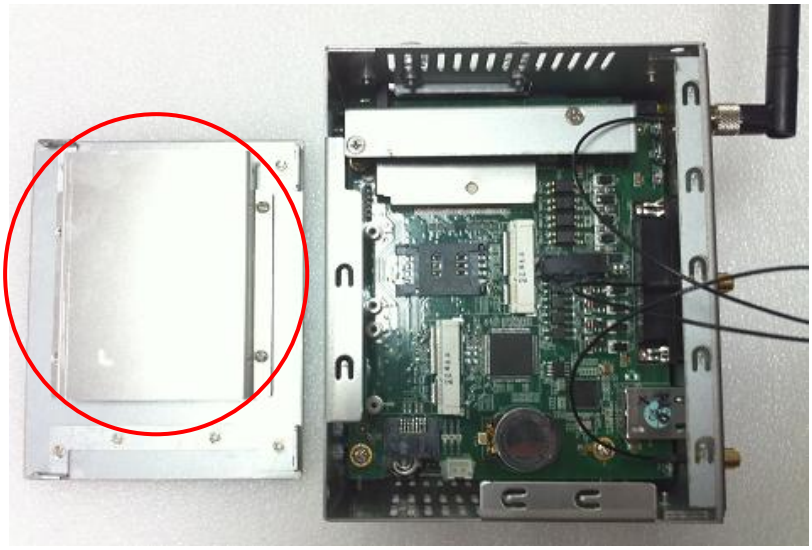

Step 4 Loosen these screws and remove the Hard Disk Drive bracket.

Step 5 Insert the HDD into the socket until it is firmly seated.

Step 6 Put the cover back to the system, and fasten screws tight close the chassis.

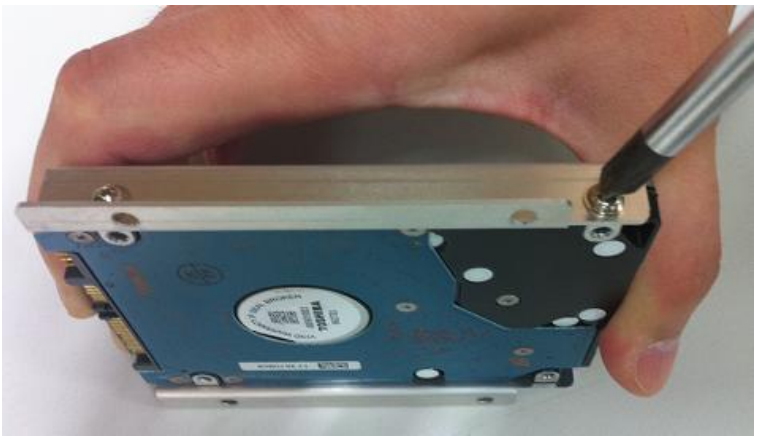

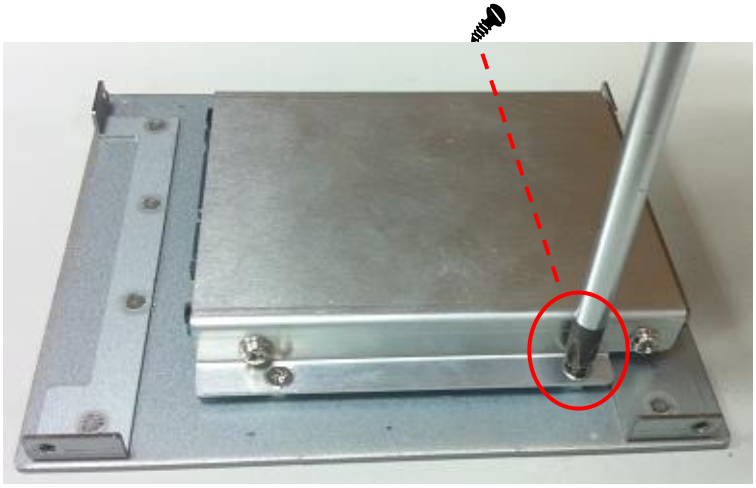

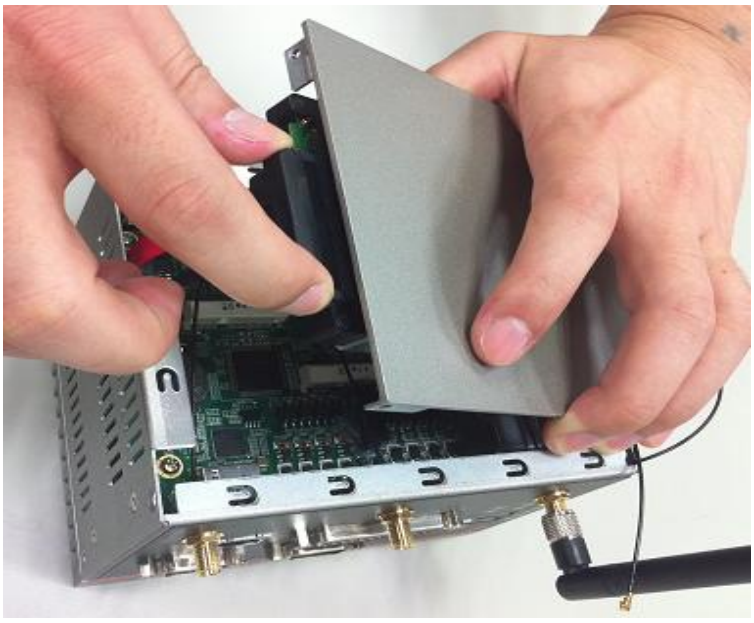

2.3 Installing Din-rail Mounting

The rBOX provides Din-rail Mount that customers can install as below:

Step 1 Prepare DIN Mount assembling components (screws and bracket) ready.

Step 2 Assembly the bracket to the system, and fasten screws tight.

Note

Please notice the Din-rail holes with Wall-mounting holes while assembly the bracket to system.

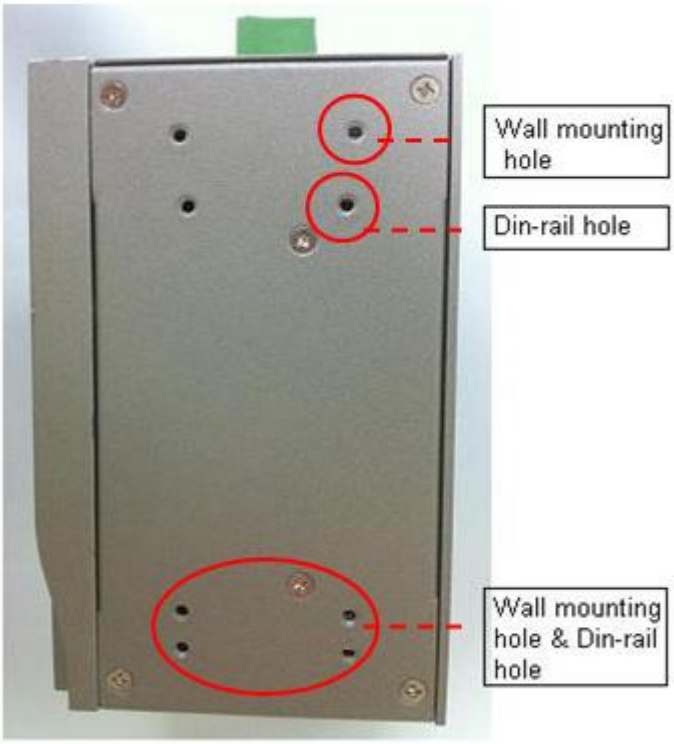

Note

Please notice the Din-rail holes with Wall-mounting holes while assembly the bracket to system.

The Din-rail hole drawing for rBOX120 is listed below:

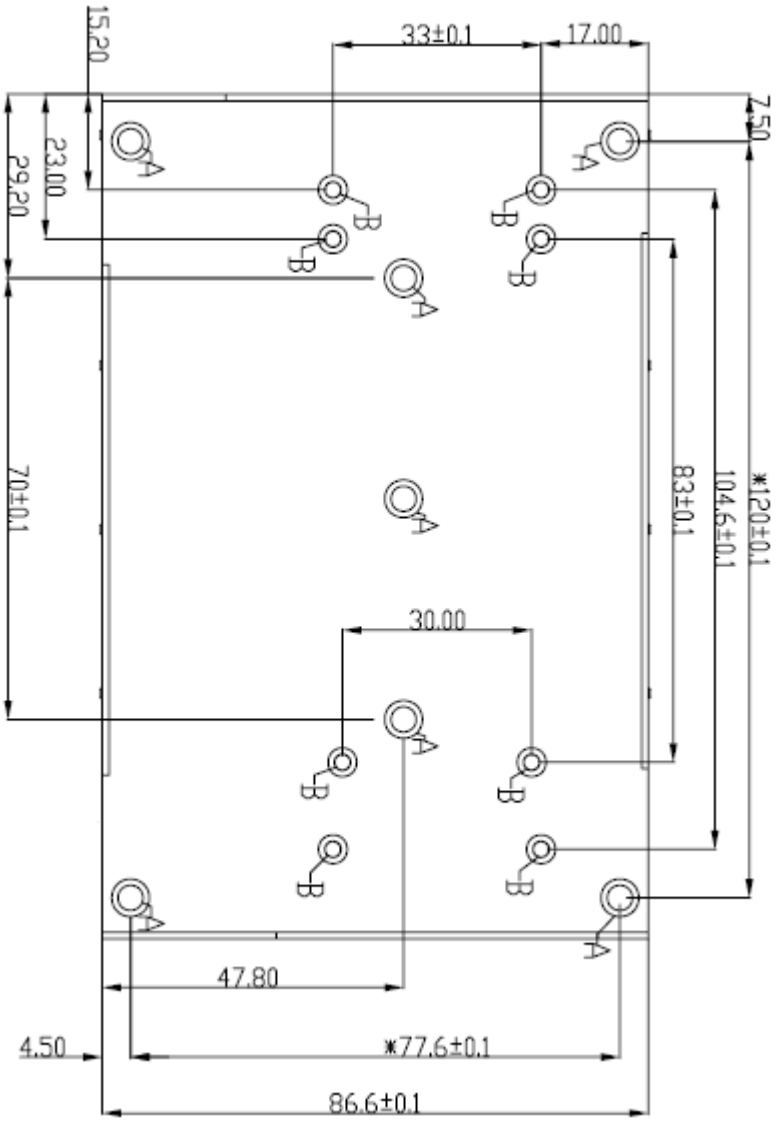

The Din-rail kit drawing is listed below:

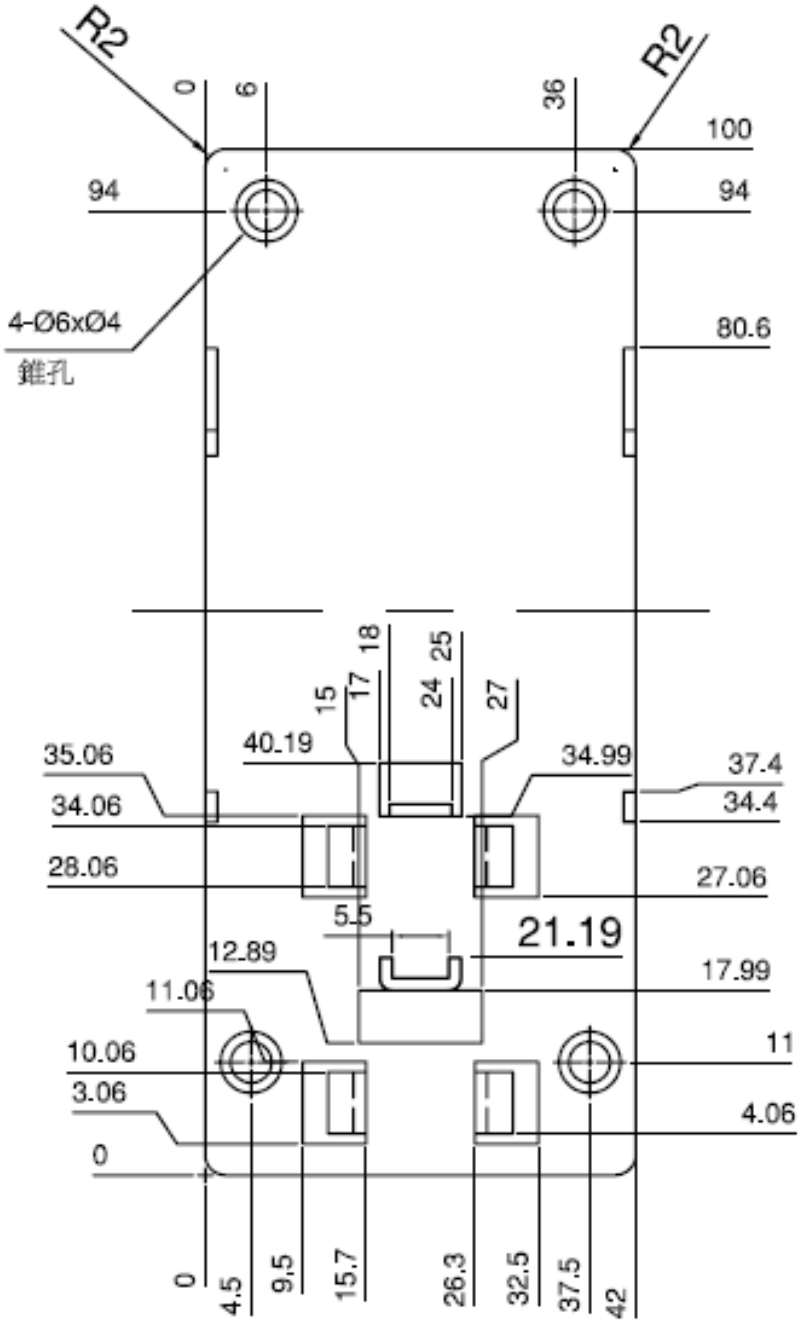

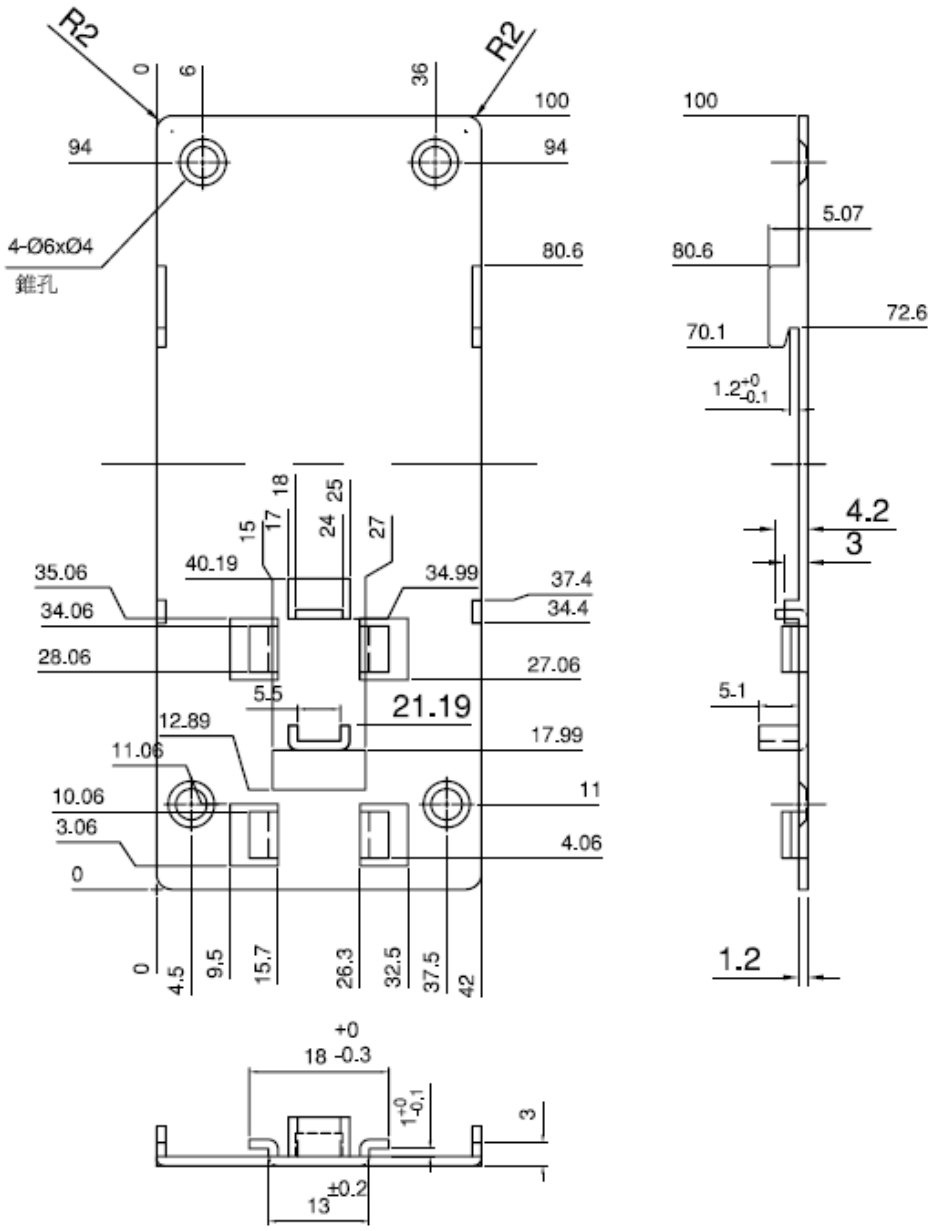
R2
R2
0
6
36
100
94
94
4-Ø6xØ4
錐孔
80.6
18
25
15
17
24
27
35.06
40.19
34.99
37.4
34.06
34.4
28.06
27.06
5.5
21.19
12.89
17.99
11.06
10.06
11
3.06
4.06
0
0
4.5
9.5
15.7
26.3
32.5
37.5
42
+0
18 -0.3
3
1
±0.2
13
100
5.07
80.6
72.6
70.1
4.2
3
5.1
1.2

- **Setting up rBOX by Din-rail mounting**

The rBOX set up by Din-rail mounting as below:

Step 1 Fixing the rail firstly.

Step 2 Set up the rBOX on the rail by Din-rail mounting

1

2

3

4

2.4 Installing Wall Mounting (optional)

The rBOX provides Wall Mounting that customers can install as below:

Step 1 Prepare Wall Mount assembling components (screws and bracket) ready.

Step 2 Assembly the bracket to the system, and fasten screws tight.

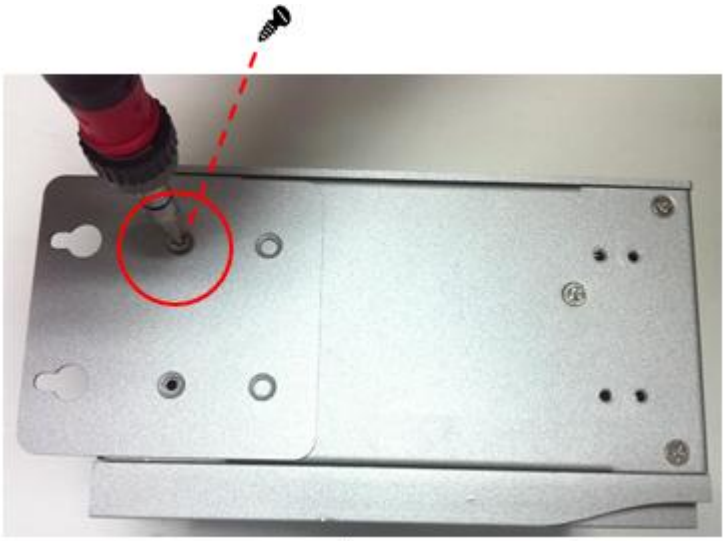

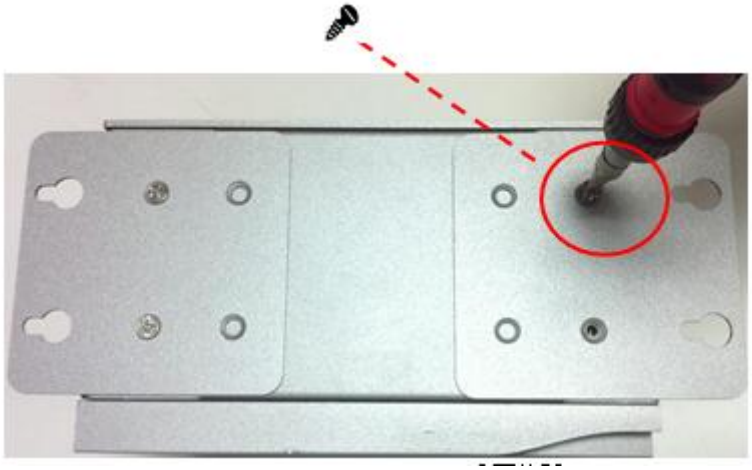

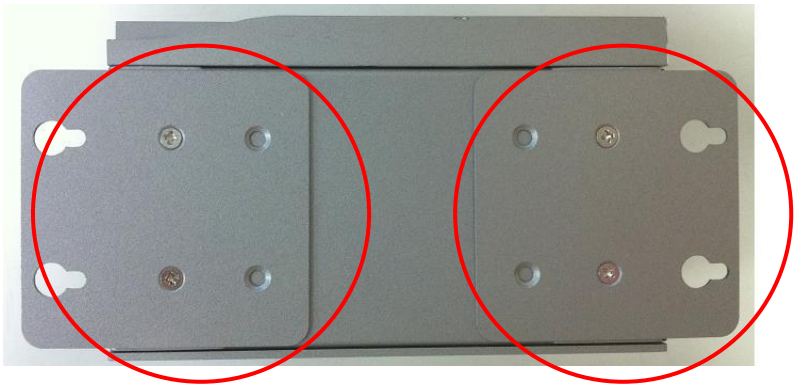

Note

Please notice the Din-rail holes with Wall-mounting holes while assembly the bracket to system.

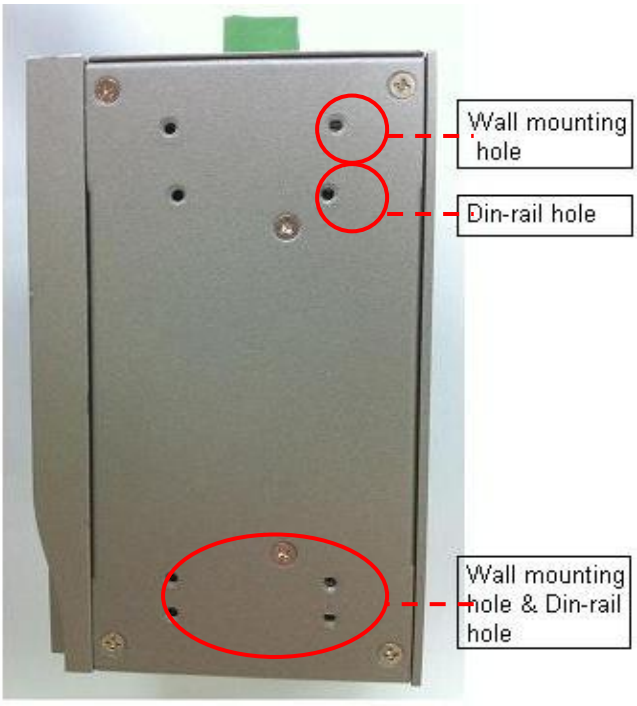

CHAPTER 3
PHOENIX-AWARD BIOS UTILITY

The Phoenix-Award BIOS provides users with a built-in Setup program to modify basic system configuration. All configured parameters are stored in a flash-backed-up to save the Setup information whenever the power is turned off.

3.1 Entering Setup

There is one way to enter the Setup program. You may either turn ON the computer and press <Del> immediately.

3.2 Control Keys

Up arrow	Move to the previous item
Down arrow	Move to the next item
Left arrow	Move to the left side
Right arrow	Move to the right side
Esc key	Main Menu -- Quit and delete changes into CMOS Status Page Setup Menu and Option Page Setup Menu -- Exit current page and return to Main Menu
PgUp/"+"key	Increase the numeric value or make changes
PgDn/"–" key	Decrease the numeric value or make changes
F6 key	Load the default CMOS value from BIOS default table, only for Option Page Setup Menu
F7 key	Load the Setup default, only for Option Page Setup Menu
F10 key	Save all the CMOS changes, only for Main Menu

3.3 The Main Menu

Once you enter the Award BIOS CMOS Setup Utility, the Main Menu appears on the screen. In the Main Menu, there are several Setup functions and a couple of Exit options for your selection. Use arrow keys to select the Setup Page you intend to configure then press <Enter> to accept or enter its sub-menu.

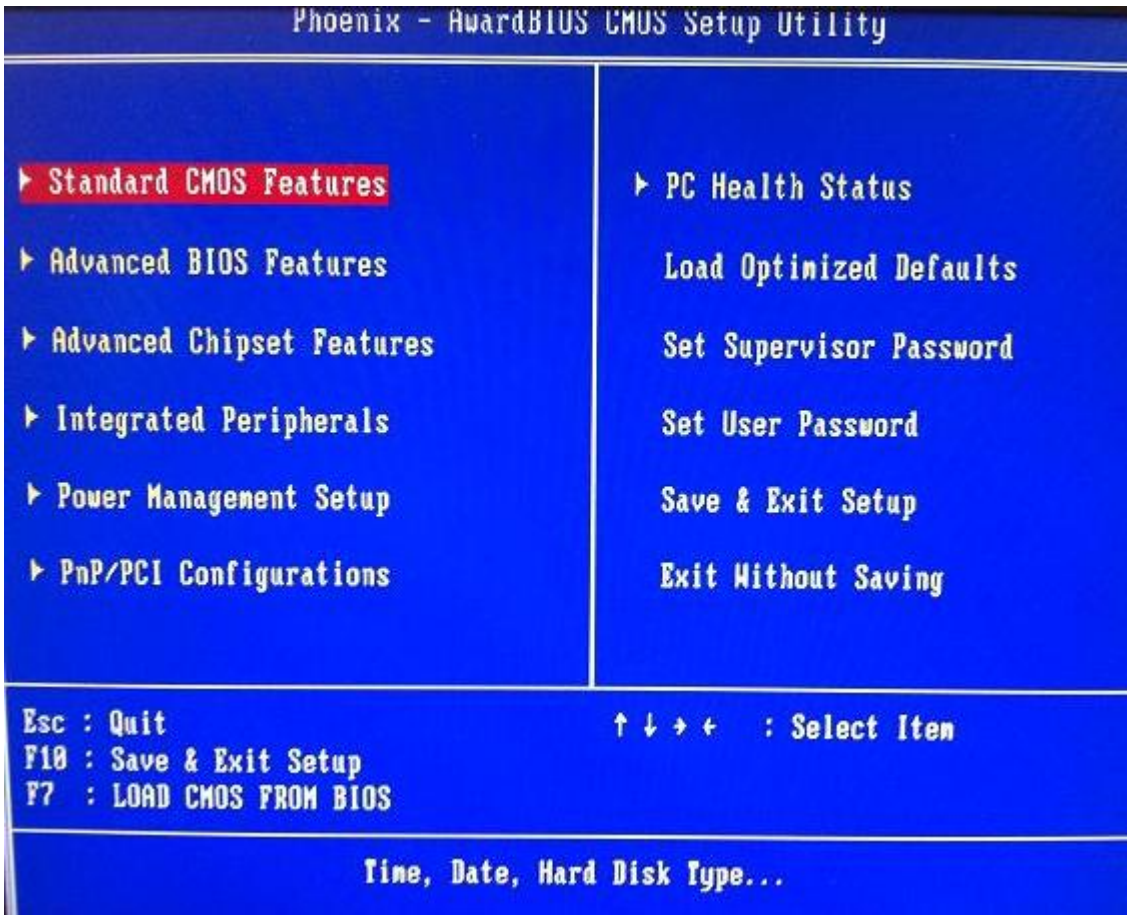

Note

1. ***If your computer can not boot after making and saving system changes with Setup, the Award BIOS will reset your system to the CMOS default settings via its built-in override feature.***
2. ***It is strongly recommended that you should avoid changing the chipset's defaults. Both Award and your system manufacturer have carefully set up these defaults that provide the best performance and reliability.***

3.4 Standard CMOS Setup Menu

The Standard CMOS Setup Menu displays basic information about your system. Use arrow keys to highlight each item, and use <PgUp> or <PgDn> key to select the value you want in each item.

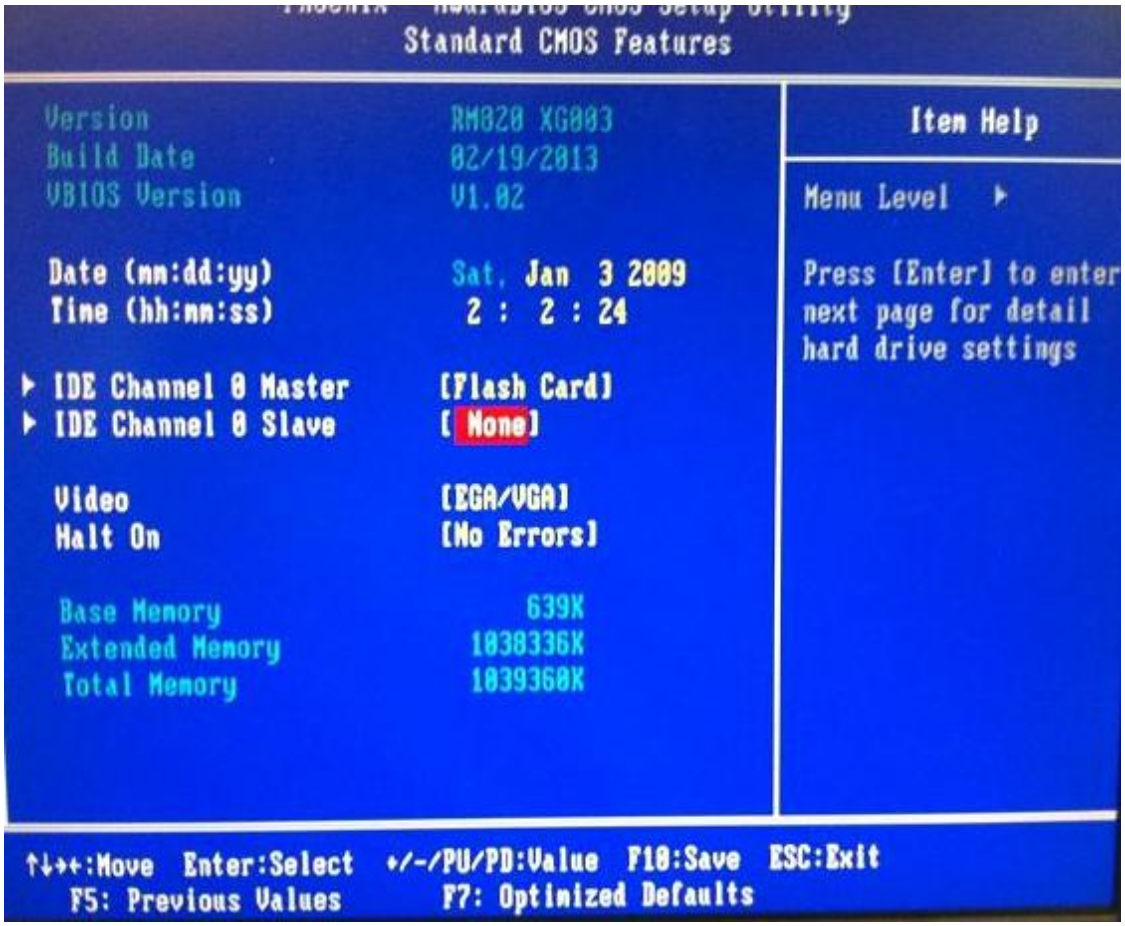

Date
The date format is <day> <month> <date> <year>.

Time
This item shows current time of your system with the format <hour> <minute> <second>. The time is calculated based on the 24-hour military-time clock. For example, 1 p.m. is 13:00:00.

Note ***If system is power failure, the date and time will come back to previous setup.***

- **IDE Primary Master/Primary Slave**

These items identify the types of each IDE channel installed in the computer, so, IDE type is auto detection.

IDE Channel 0 Master/Slave

The master iteam shows CF card information only. The slave iteam shows HDD information only.

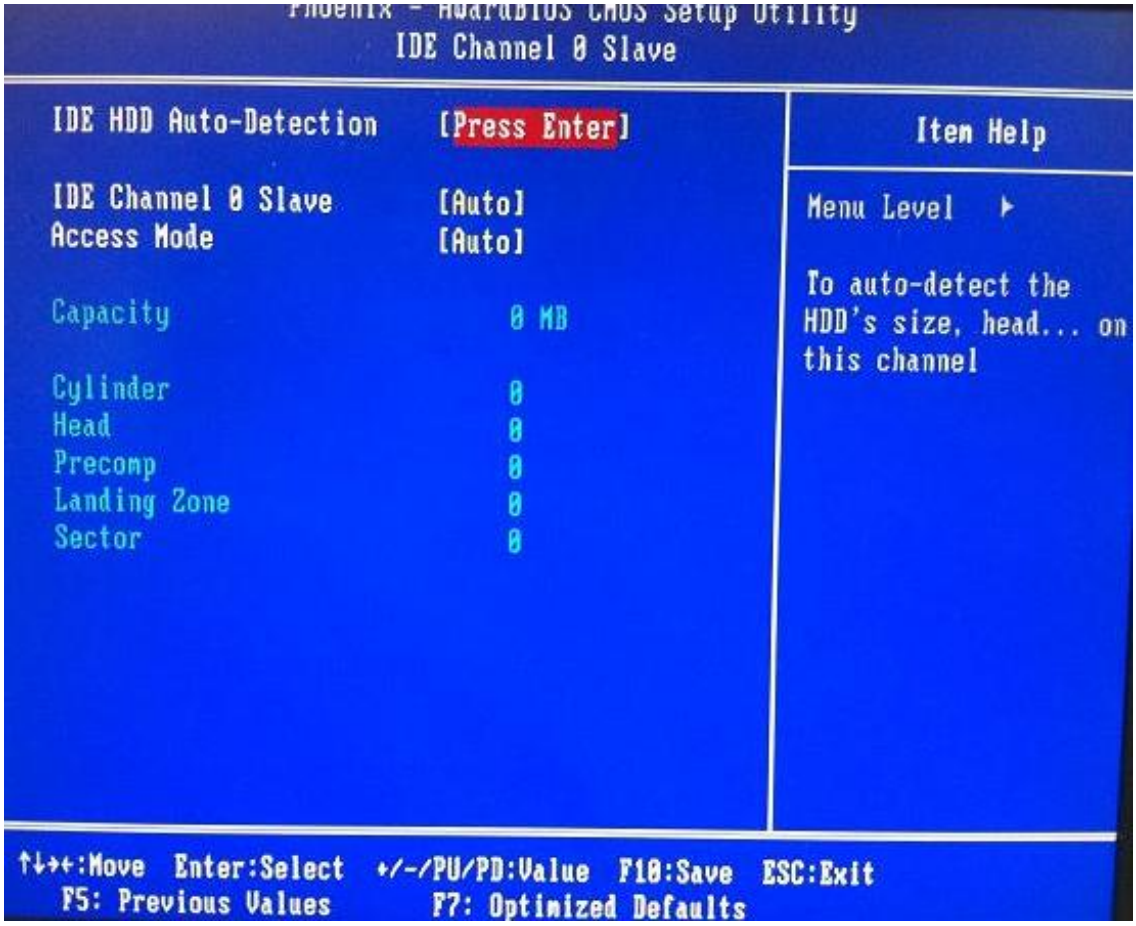

Video
Select the display adapter type for your system.

Halt On
This item determines whether the system will halt or not, if an error is detected while powering up.

No errors	The system booting will halt on any errors detected. (default)
All errors	Whenever BIOS detects a non-fatal error, the system will stop and you will be prompted.
All, But Keyboard	The system booting will not stop for a keyboard error; it will stop for other errors.

Press <Esc> to return to the Main Menu page. USB Device Setting

3.5 Advanced BIOS Features

This section allows you to configure and improve your system, to set up some system features according to your preference.

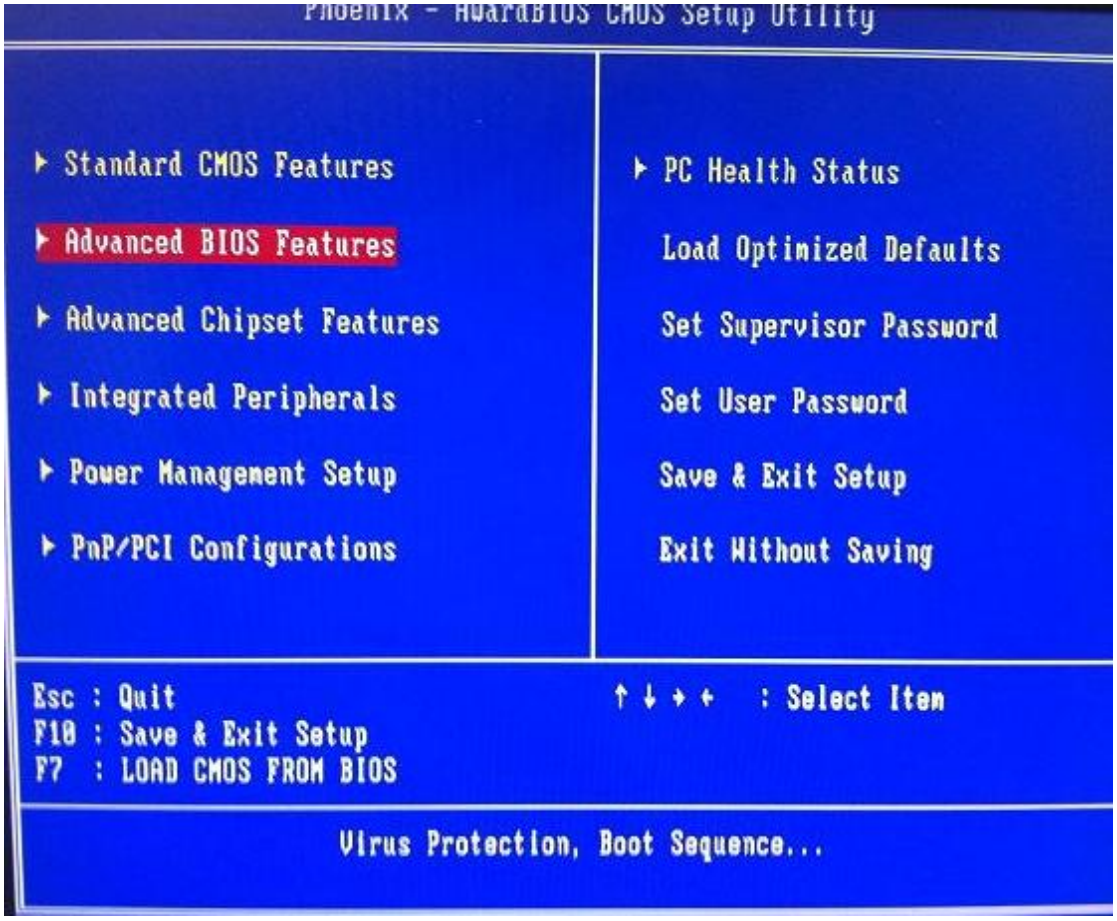

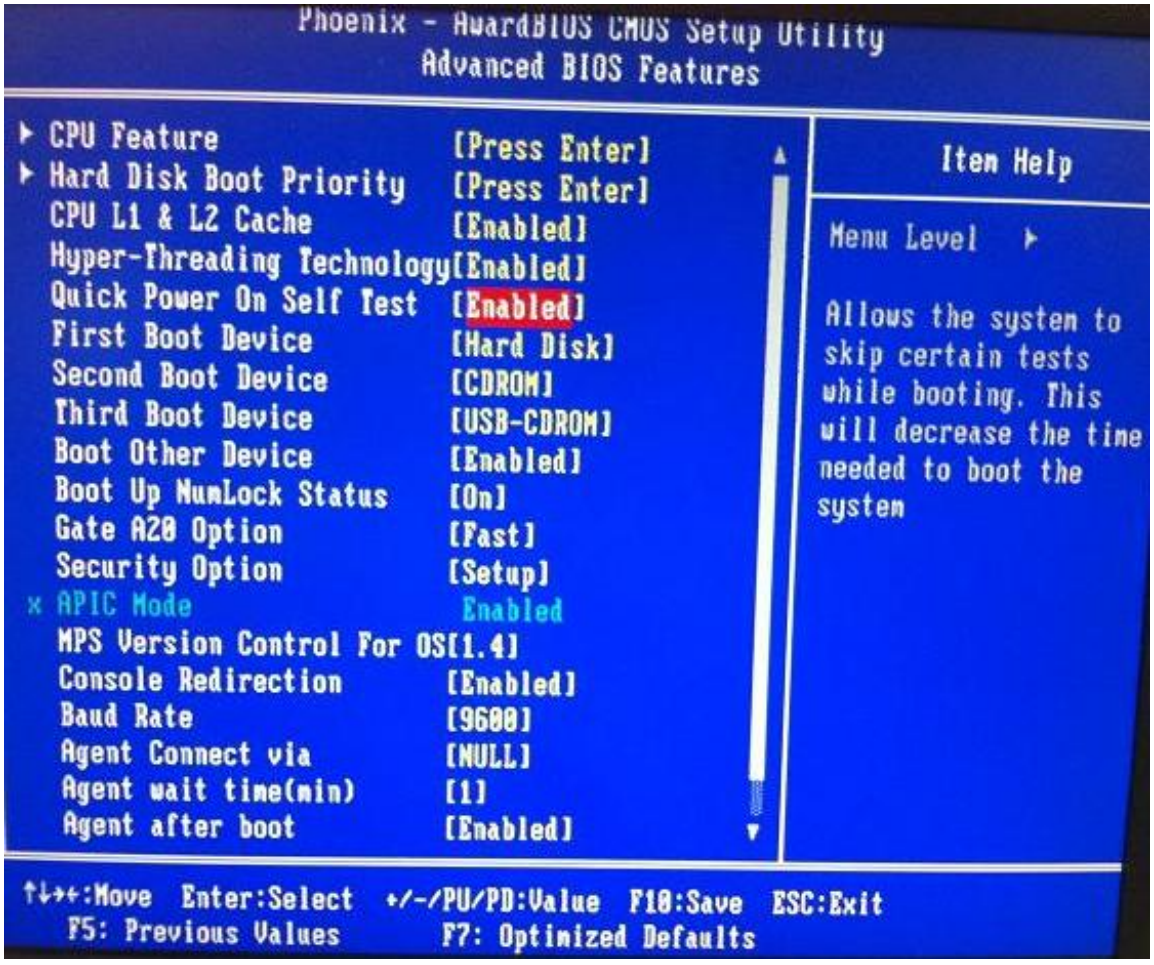
Phoenix - AwardBIOS CMOS Setup Utility
Advanced BIOS Features
CPU Feature [Press Enter]
Hard Disk Boot Priority [Press Enter]
CPU L1 & L2 Cache [Enabled]
Hyper-Threading Technology [Enabled]
Quick Power On Self Test [Enabled]
First Boot Device [Hard Disk]
Second Boot Device [CDROM]
Third Boot Device [USB-CDROM]
Boot Other Device [Enabled]
Boot Up NumLock Status [On]
Gate A20 Option [Fast]
Security Option [Setup]
x APIC Mode Enabled
MPS Version Control For OS [1.4]
Console Redirection [Enabled]
Baud Rate [9600]
Agent Connect via [NULL]
Agent wait time(min) [1]
Agent after boot [Enabled]
Item Help
Menu Level ▸
Allows the system to skip certain tests while booting. This will decrease the time needed to boot the system
↑↓→←:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit
F5: Previous Values F7: Optimized Defaults

Note ***The BIOS default setting of the system is "Previous Setup". It means that if the system is power failure or power loss, the system will come back to previous setup while be re-boot.***

If you want to change the BIOS setting, please set up from "Advanced BIOS Features" (Please refer below graphic.)

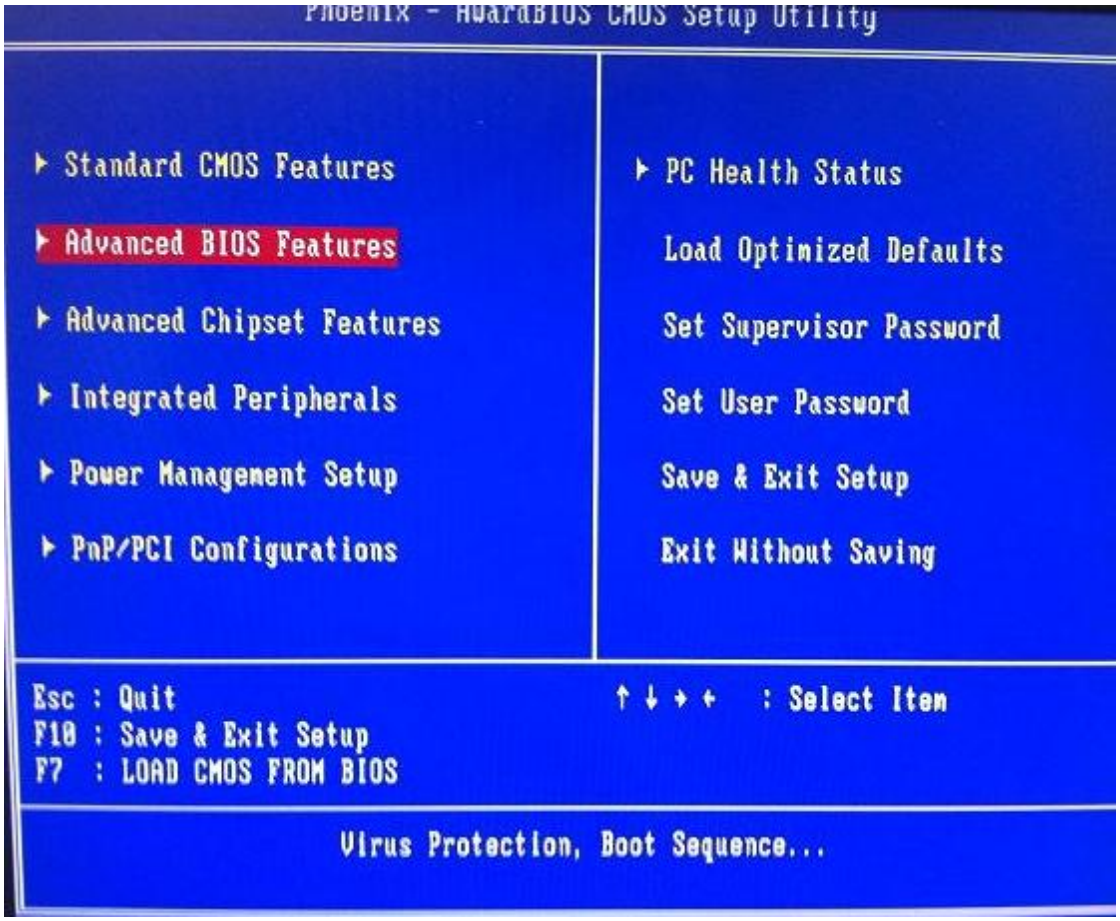

Then, to select "BIOS Optimized" or "Previous Setup" under "Optimized Default Select". (Please refer below graphic.)

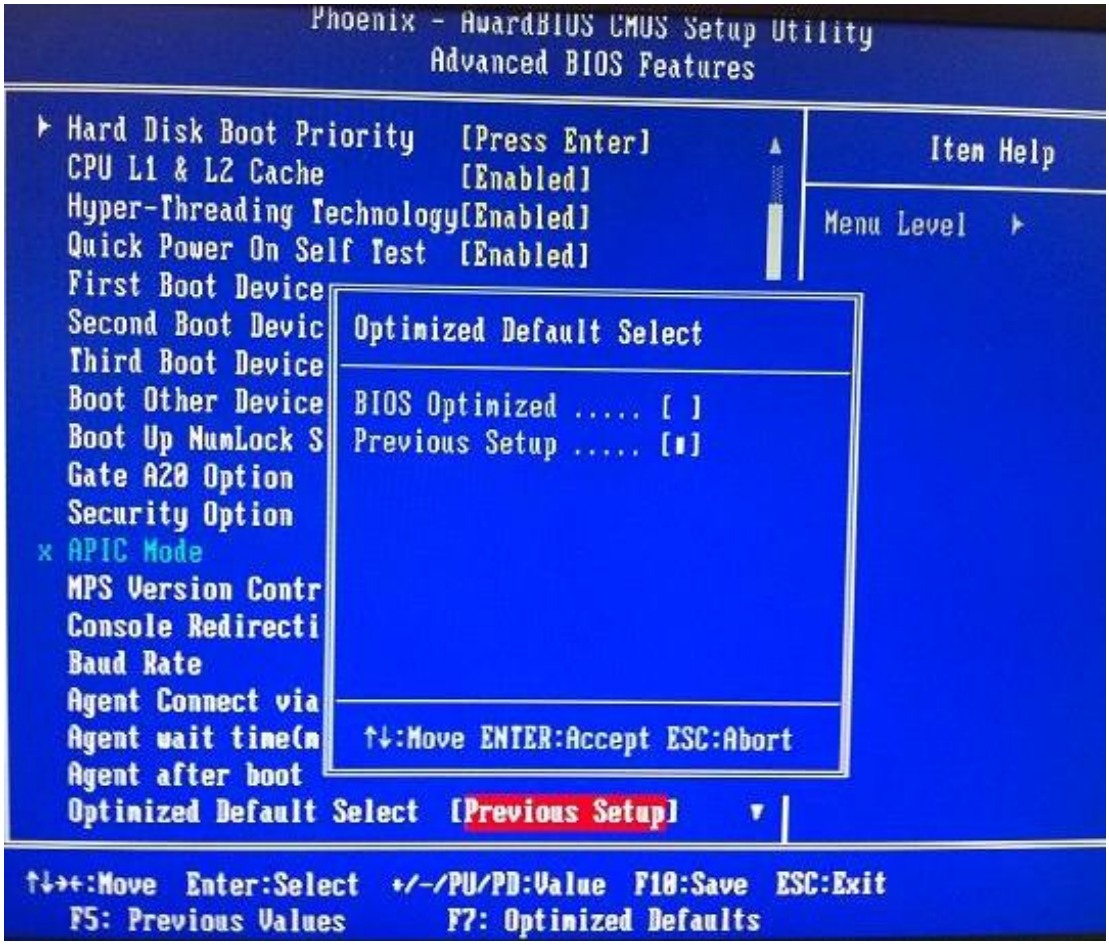

Further to save the selection (System will execute about 15 seconds)

Finally, please shut down the system, then re-boot it, the system will come back to your changed Optimized Default Select.

- **CPU Features**

Scroll to this item and press <Enter> to view the CPU Feature sub menu.

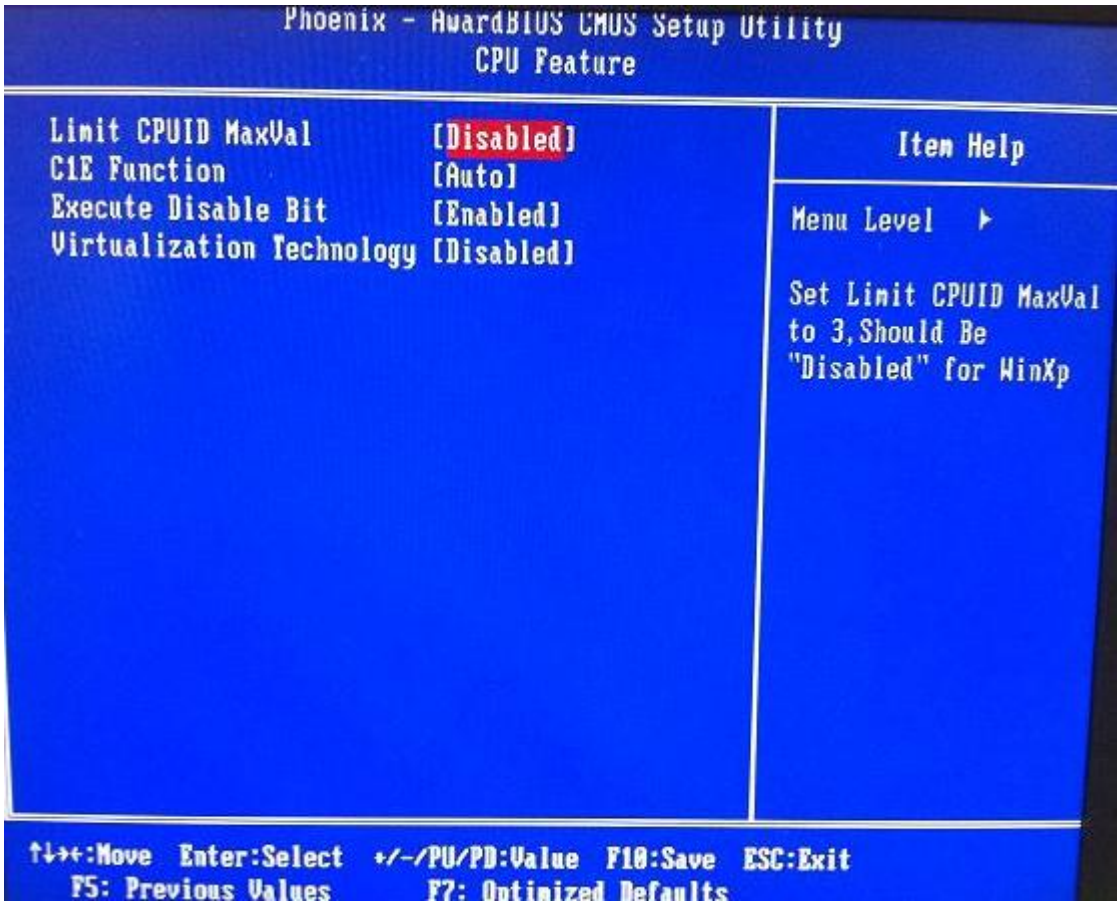
Phoenix - AwardBIOS CMOS Setup Utility
CPU Feature
Limit CPUID MaxVal [Disabled]
C1E Function [Auto]
Execute Disable Bit [Enabled]
Virtualization Technology [Disabled]
Item Help
Menu Level ▸
Set Limit CPUID MaxVal to 3, Should Be "Disabled" for WinXp
↑↓→←:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit
F5: Previous Values F7: Optimized Defaults

- **Harddisk boot priority**

Scroll to this item and press <Enter> to view the sub menu to decide the disk boot priority

Phoenix - AwardBIOS CMOS Setup Utility
Hard Disk Boot Priority
1. Bootable Add-in Cards
Item Help
Menu Level ▸
Use (↑) or (↓) to select a device , then press (+) to move it up , or (-) to move it down the list. Press (ESC) to exit this menu.
↑↓:Move
PU/PD/+/-:Change Priority
F10:Save
ESC:Exit

- **Quick Power On Self Test**

This Option Speeds up Power on Self Test(POST) after you turn on the system power. If set as Enabled, BIOS will shorten or skip some check items during POST. The default setting is "Enabled".

Enabled	Enable Quick POST
Disabled	Normal POST

- **First/Second/Third Boot Device**

These items let you select the 1st, 2nd, and 3rd devices that the system will search for during its boot-up sequence. There is a wide range of options for your selection.

- **Boot Other Device**

These items allows the user to enable/disable the boot device not listed on the First/Second/Third boot devices option above. The default setting is "Enabled".

- **Security Option**

This item allows you to limit access to the system and Setup, or just to Setup. The default value is "Setup".

System
Setup

System System requires correct password before booting, and also before permitting access to the Setup page.

Setup System will boot, but requires correct password before permitting access to Setup. (Default value)

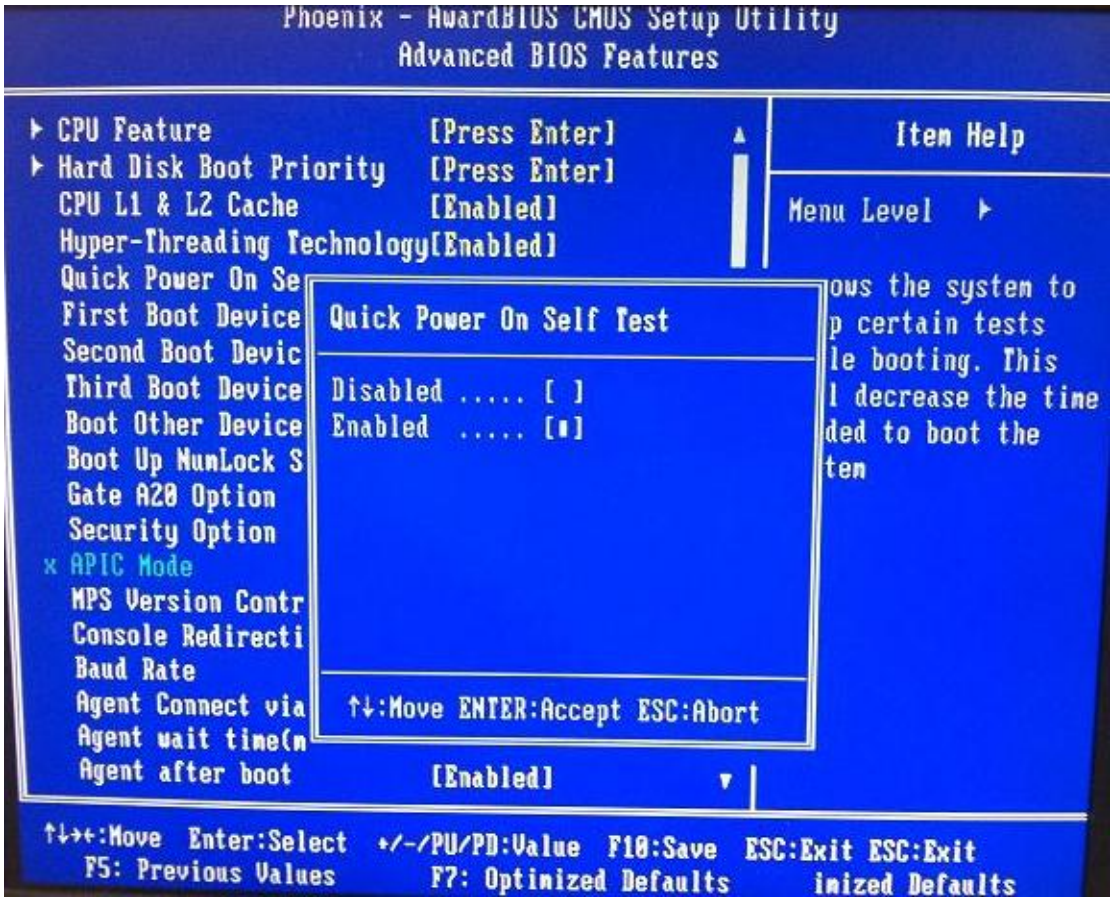

Note ***To disable the security, select PASSWORD SETTING at Main Menu and then you will be asked to enter a password. Do not type anything, just press <Enter> and it will disable the security. Once the security is disabled, the system will boot and you can enter Setup freely.***

- **APIC Mode**

APIC (Advanced Programmable Interrupt Controller) mode is *enabled* that provides symmetric multiprocessing (SMP) for systems.

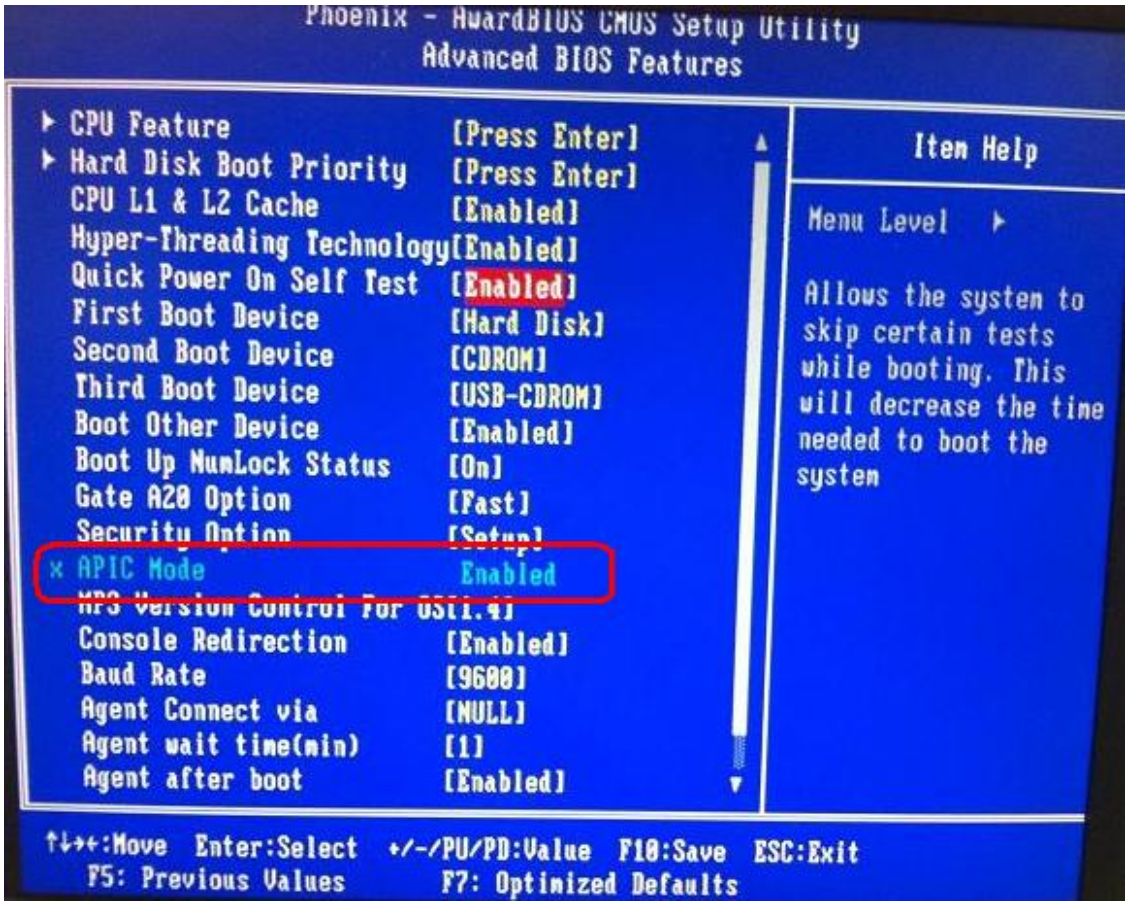
Phoenix - AwardBIOS CMOS Setup Utility
Advanced BIOS Features
CPU Feature [Press Enter]
Hard Disk Boot Priority [Press Enter]
CPU L1 & L2 Cache [Enabled]
Hyper-Threading Technology [Enabled]
Quick Power On Self Test [Enabled]
First Boot Device [Hard Disk]
Second Boot Device [CDROM]
Third Boot Device [USB-CDROM]
Boot Other Device [Enabled]
Boot Up NumLock Status [On]
Gate A20 Option [Fast]
Security Option [Setup]
APIC Mode Enabled
Console Redirection [Enabled]
Baud Rate [9600]
Agent Connect via [NULL]
Agent wait time(min) [1]
Agent after boot [Enabled]
Item Help
Menu Level
Allows the system to skip certain tests while booting. This will decrease the time needed to boot the system
↑↓→←:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit
F5: Previous Values F7: Optimized Defaults

Note ***APIC Mode has been locked and cannot be modified.***

- **MPS Version Control For OS**

This item specifies the version of the Multiprocessor Specification (MPS). Version 1.4 has extended configuration tables to improve support for multiple PCI bus configurations and provide future expandability.

Press <Esc> to return to the Main Menu page.

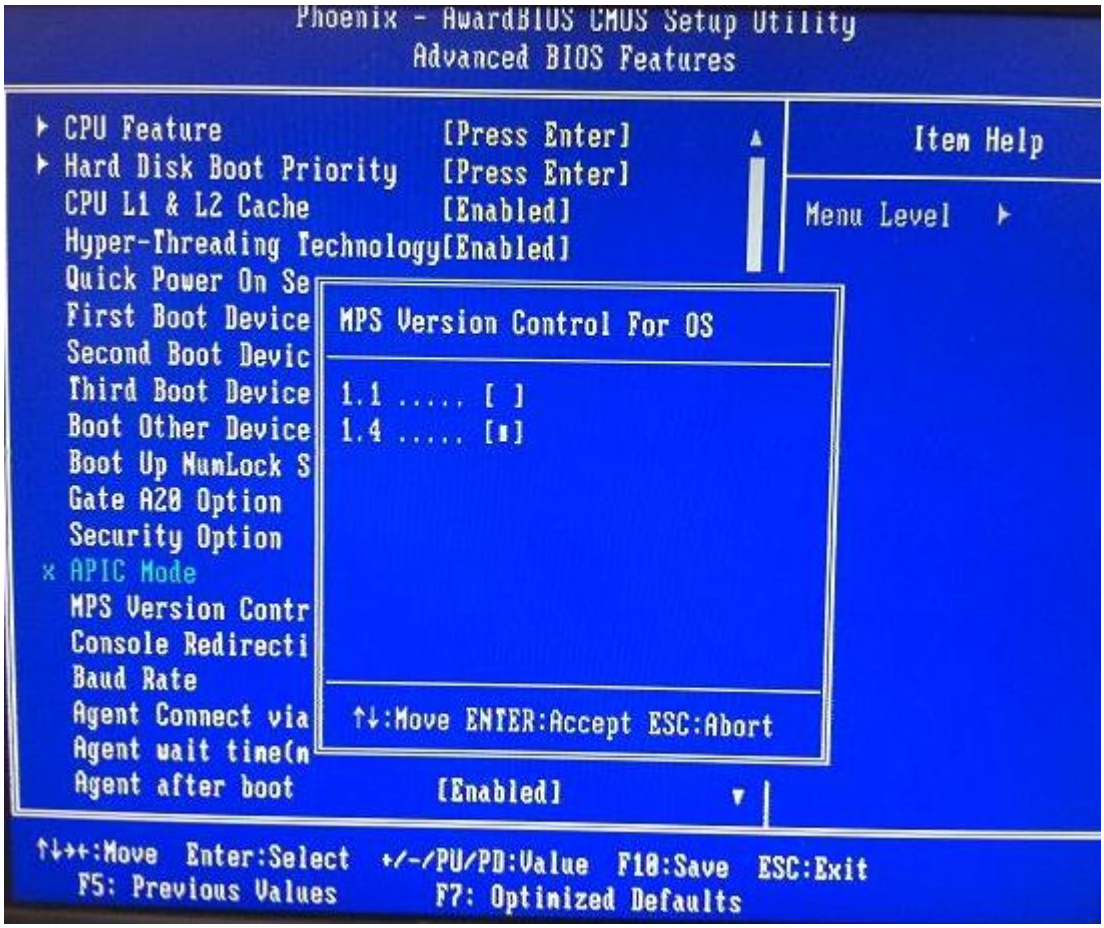

3.6 Advanced Chipset Features

This section contains completely optimized chipset's features on the board that you are strongly recommended to leave all items on this page at their default values unless you are very familiar with the technical specifications of your system hardware.

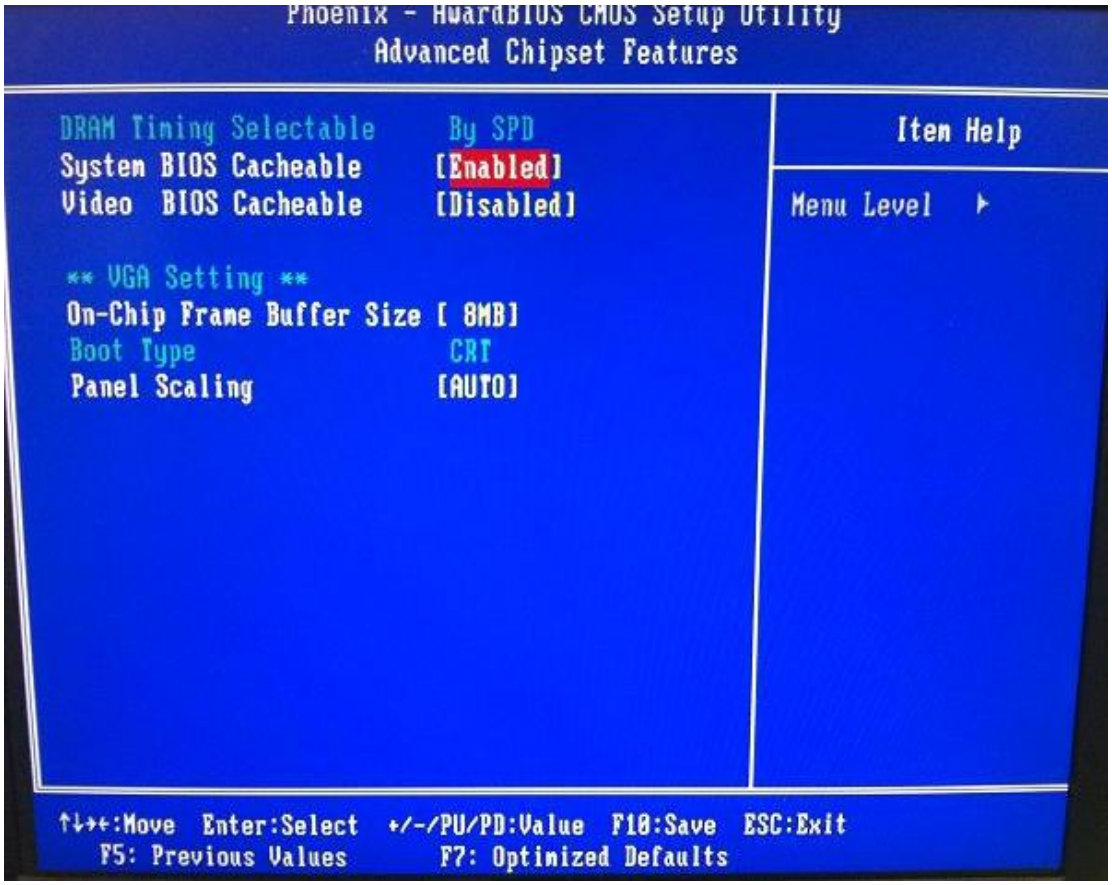
Phoenix - AwardBIOS CMOS Setup Utility
Advanced Chipset Features
DRAM Timing Selectable By SPD
System BIOS Cacheable [Enabled]
Video BIOS Cacheable [Disabled]
** VGA Setting **
On-Chip Frame Buffer Size [8MB]
Boot Type CRT
Panel Scaling [AUTO]
Item Help
Menu Level ▸
↑↓→←:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit
F5: Previous Values F7: Optimized Defaults

- **DRAM Timing Selectable**

Use this item to increase the timing of the memory. This is related to the cooling of memory.

- **System BIOS Cacheable**

Selecting Enabled allows caching of the system BIOS ROM at F0000h-FFFFFh, resulting in better system performance. However, if any program writes to this memory area, a system error may result. The default value is "Disabled".

- **Video BIOS Cacheable**

This item allows you to change the Video BIOS location from ROM to RAM. Video Shadow will increase the video speed.

***** VGA Setting *****

- **On-Chip Frame Buffer Size**

Use this item to set the VGA frame buffer size.

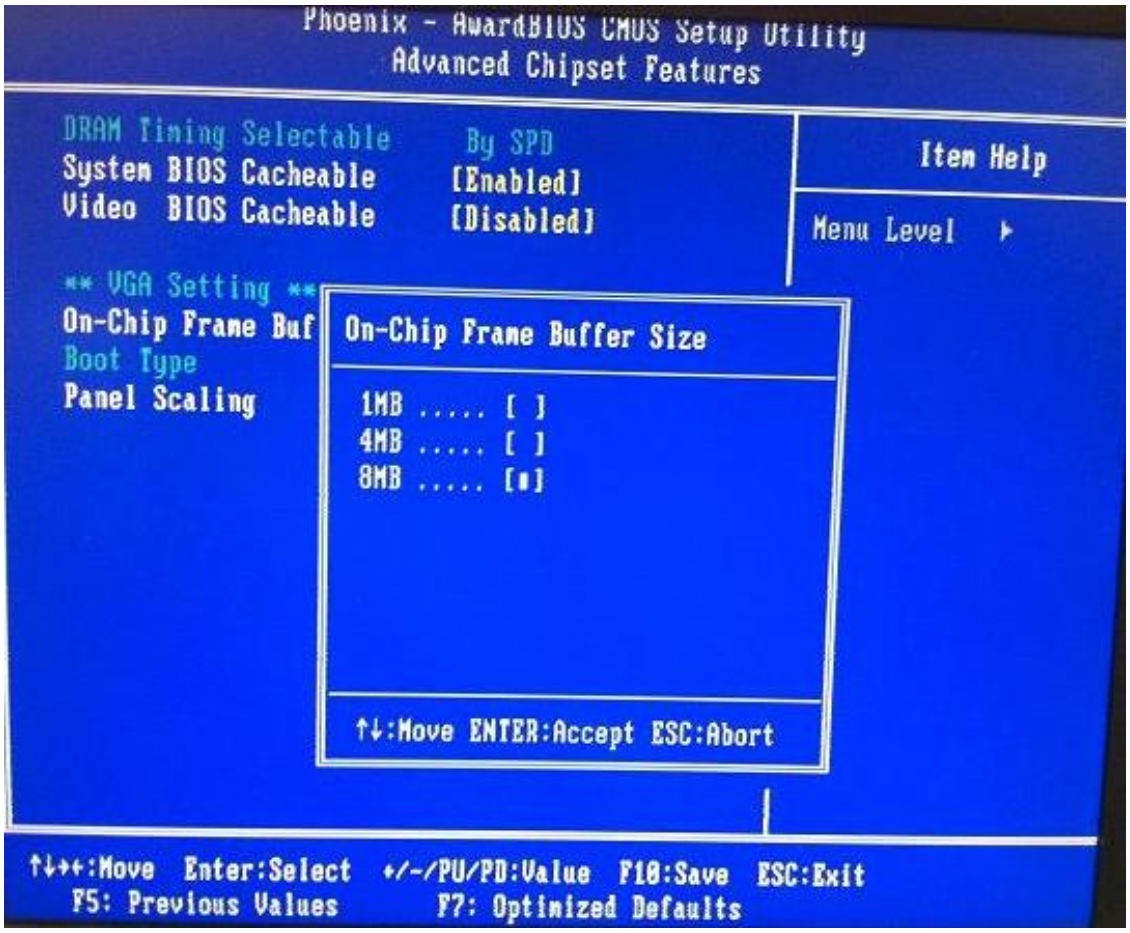

- **Boot Type** (CRT Only)

This item is to select Display Device that the screen will be shown. But its default is CRT Only and cannot be modified.

- **Panel Scaling** (AUTO by default)

This item shows the setting of panel scaling and operates the scaling function that the panel output can fit the screen resolution connected to the output port. Its default is AUTO and cannot be modified.

Press <Esc> to return to the Main Menu page.

3.7 Integrated Peripherals

This section allows you to configure your OnChip IDE Device, Onboard Device, COM Ports Interface Type and USB Device Setting…

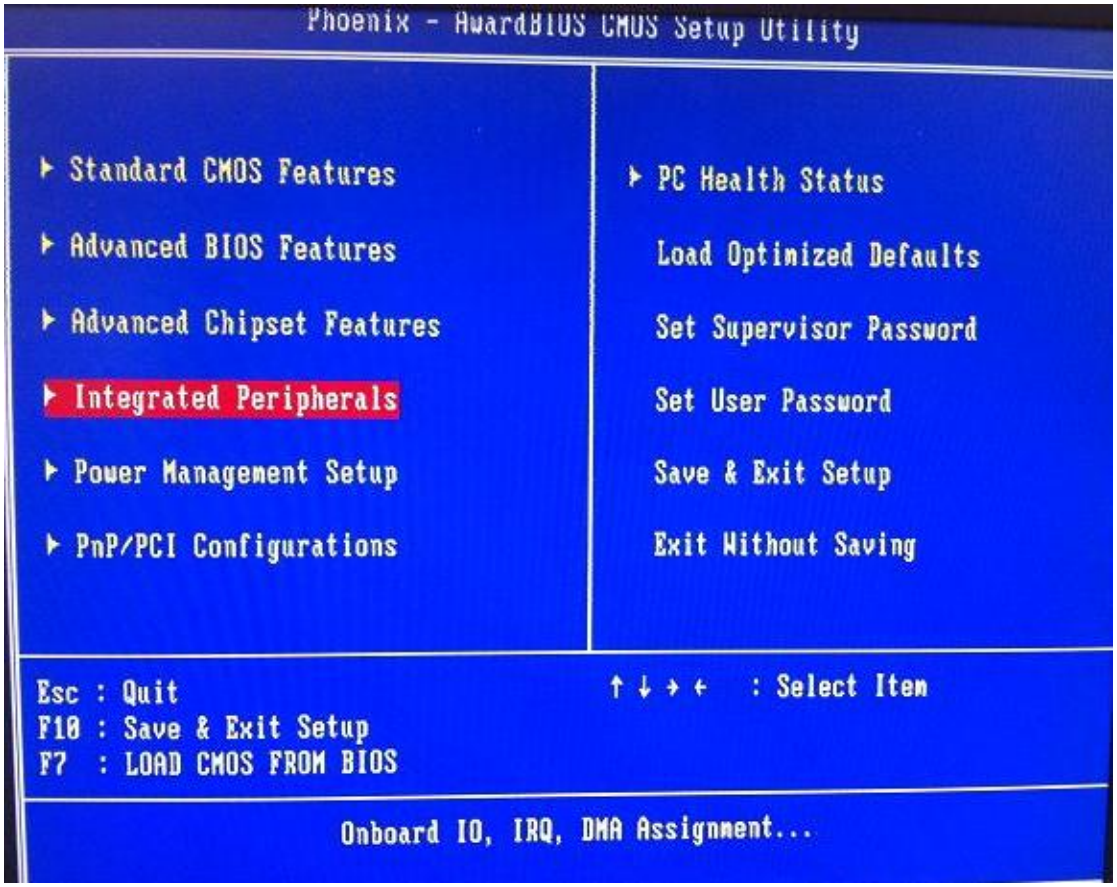

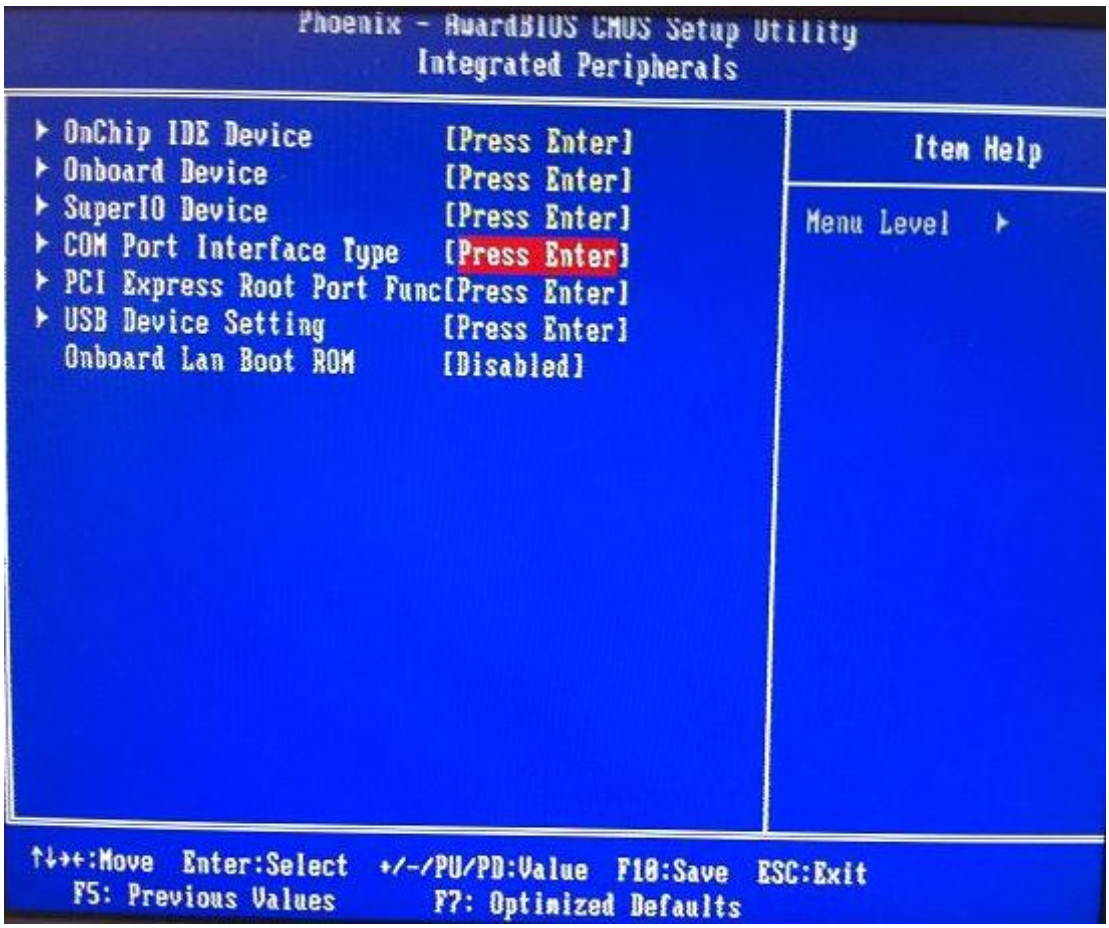
Phoenix - AwardBIOS CMOS Setup Utility
Integrated Peripherals
OnChip IDE Device [Press Enter]
Onboard Device [Press Enter]
SuperIO Device [Press Enter]
COM Port Interface Type [Press Enter]
PCI Express Root Port Func [Press Enter]
USB Device Setting [Press Enter]
Onboard Lan Boot ROM [Disabled]
Item Help
Menu Level
↑↓→←:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit
F5: Previous Values F7: Optimized Defaults

- **OnChip IDE Device**

Scroll to this item and press <Enter> to view the sub menu OnChip IDE Device.

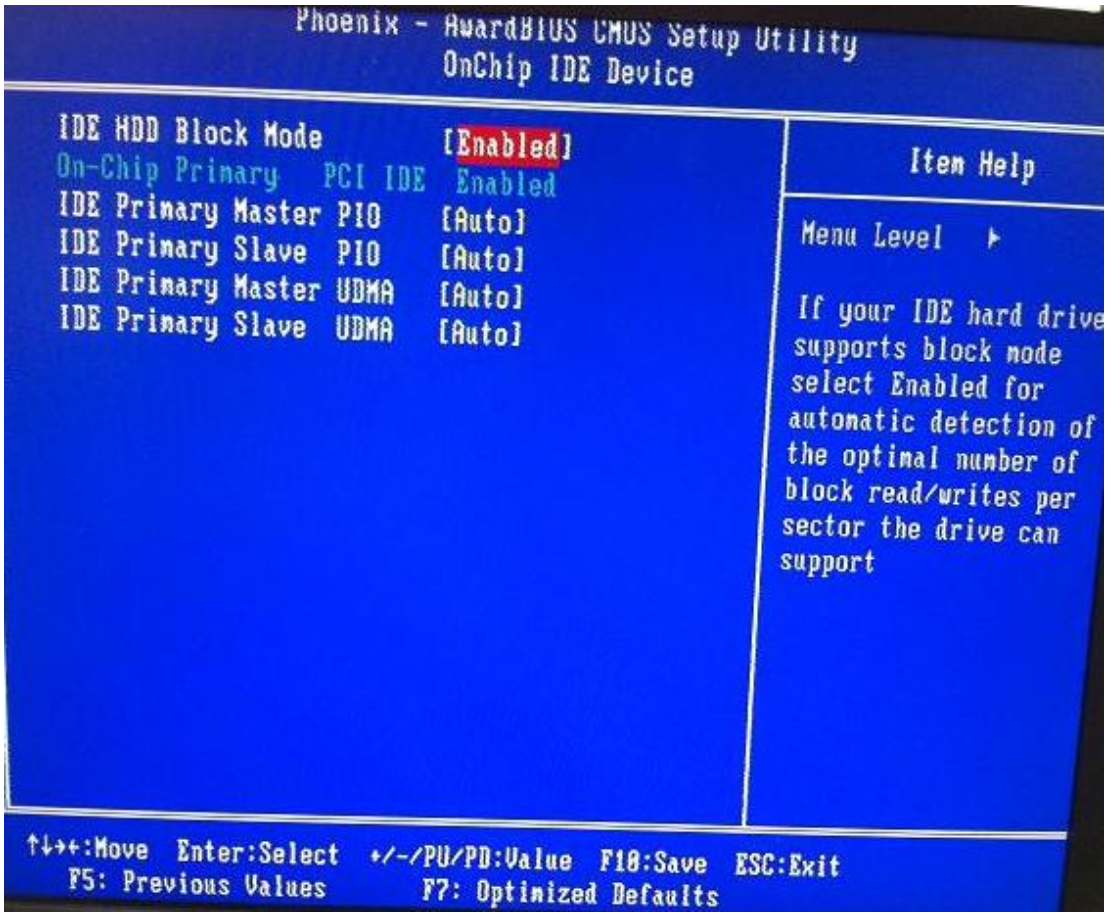
Phoenix - AwardBIOS CMOS Setup Utility
OnChip IDE Device
IDE HDD Block Mode [Enabled]
On-Chip Primary PCI IDE Enabled
IDE Primary Master PIO [Auto]
IDE Primary Slave PIO [Auto]
IDE Primary Master UDMA [Auto]
IDE Primary Slave UDMA [Auto]
Item Help
Menu Level ▸
If your IDE hard drive supports block mode select Enabled for automatic detection of the optimal number of block read/writes per sector the drive can support
↑↓→←:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit
F5: Previous Values F7: Optimized Defaults

IDE HDD Block Mode

Block mode is also called block transfer, multiple commands, and ormultiple sectors read/write. If your IDE hard drive supports block mode (most new drives do), select Enabled for automatic detection of the optimal number of block read/writes per sector the drive can support.

Press <Esc> to return to the Integrated Peripherals page.

- **Onboard Device**

Scroll to this item and press <Enter> to view the sub menu Onboard Device.

SDIO/MC Controller (Enabled)

Choose *Enabled* on the SDIO/MMC Controller

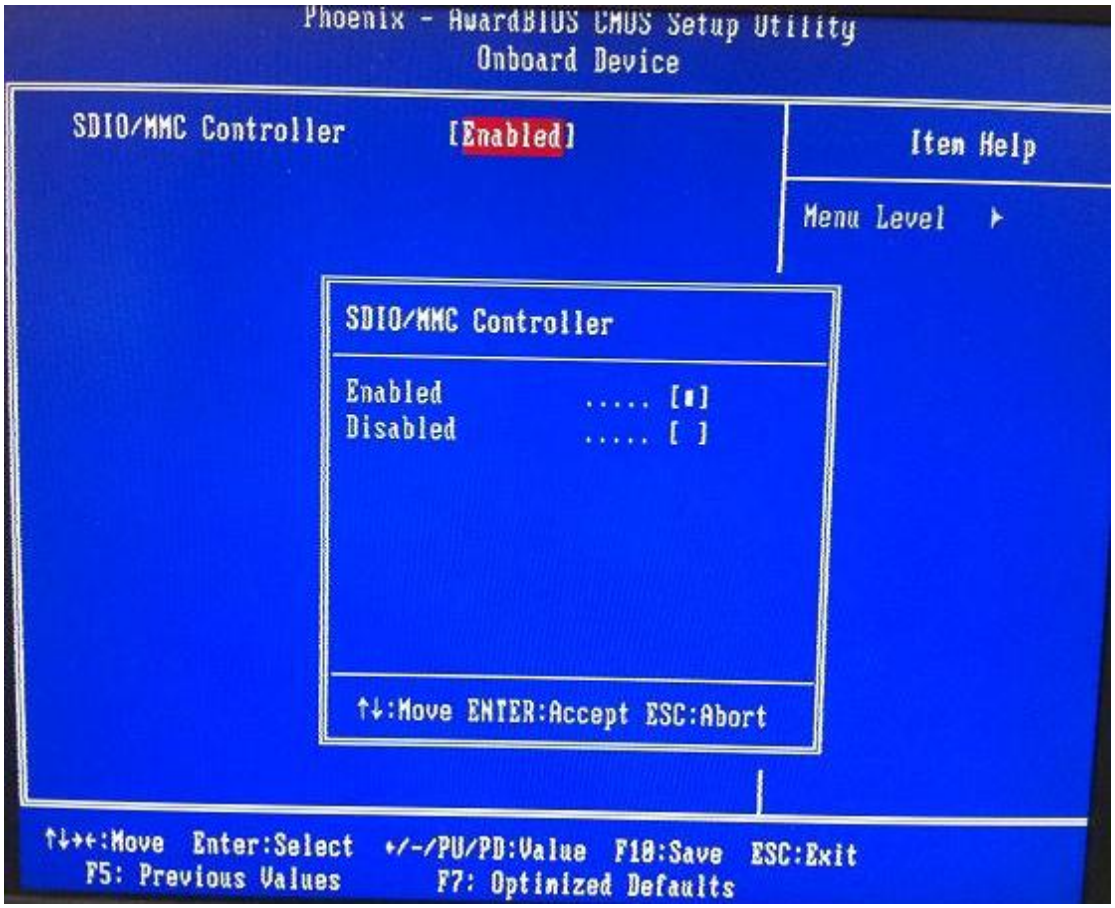

Press <Esc> to return to the Integrated Peripherals page.

- COM Port Interface Type

The default setting for all COM Ports are RS232, you can change the default setting by selecting the value you want in each COM Port Type.

Press <ESC> to return to the Integrated Peripherals page.

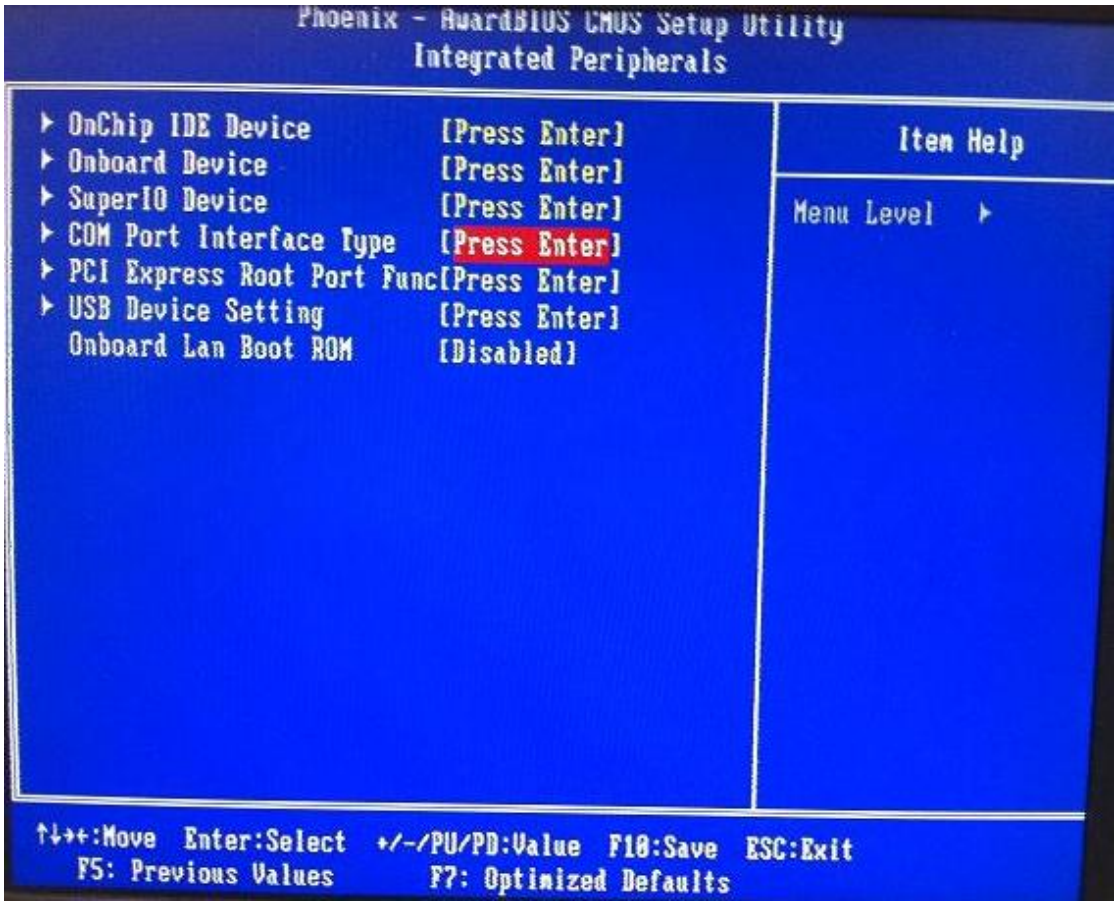
Phoenix - AwardBIOS CMOS Setup Utility
Integrated Peripherals
OnChip IDE Device [Press Enter]
Onboard Device [Press Enter]
SuperIO Device [Press Enter]
COM Port Interface Type [Press Enter]
PCI Express Root Port Func [Press Enter]
USB Device Setting [Press Enter]
Onboard Lan Boot ROM [Disabled]
Item Help
Menu Level
↑↓→←:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit
F5: Previous Values F7: Optimized Defaults

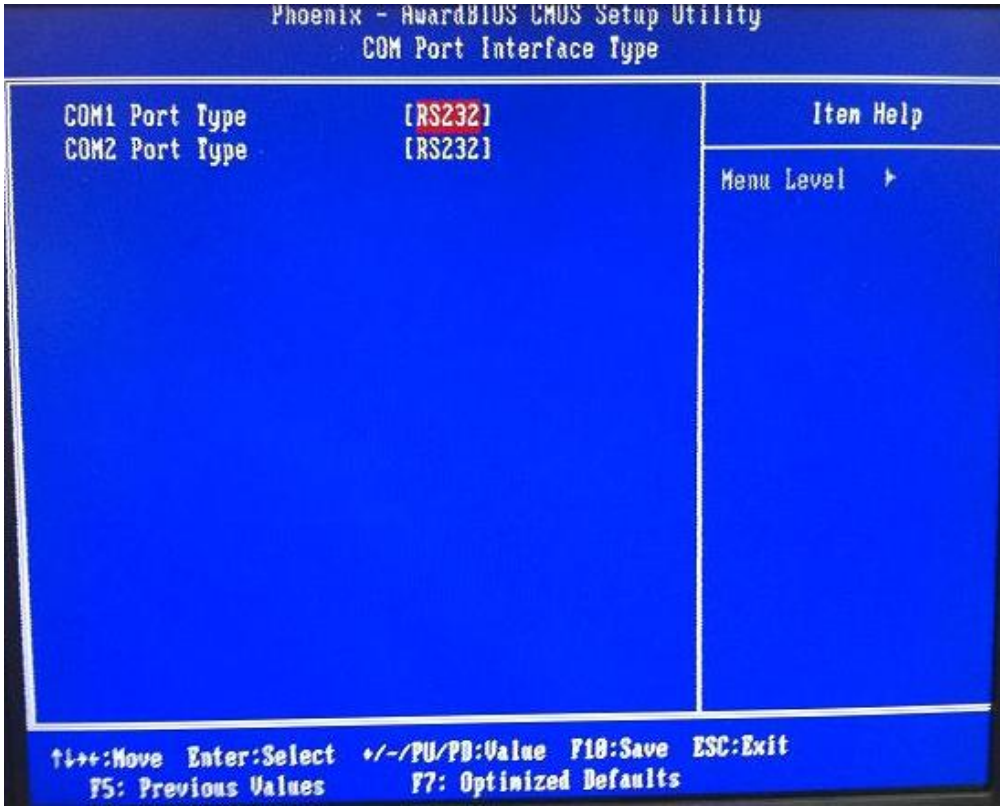
Phoenix - AwardBIOS CMOS Setup Utility
COM Port Interface Type
COM1 Port Type [RS232]
COM2 Port Type [RS232]
Item Help
Menu Level ▸
↑↓→←:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit
F5: Previous Values F7: Optimized Defaults

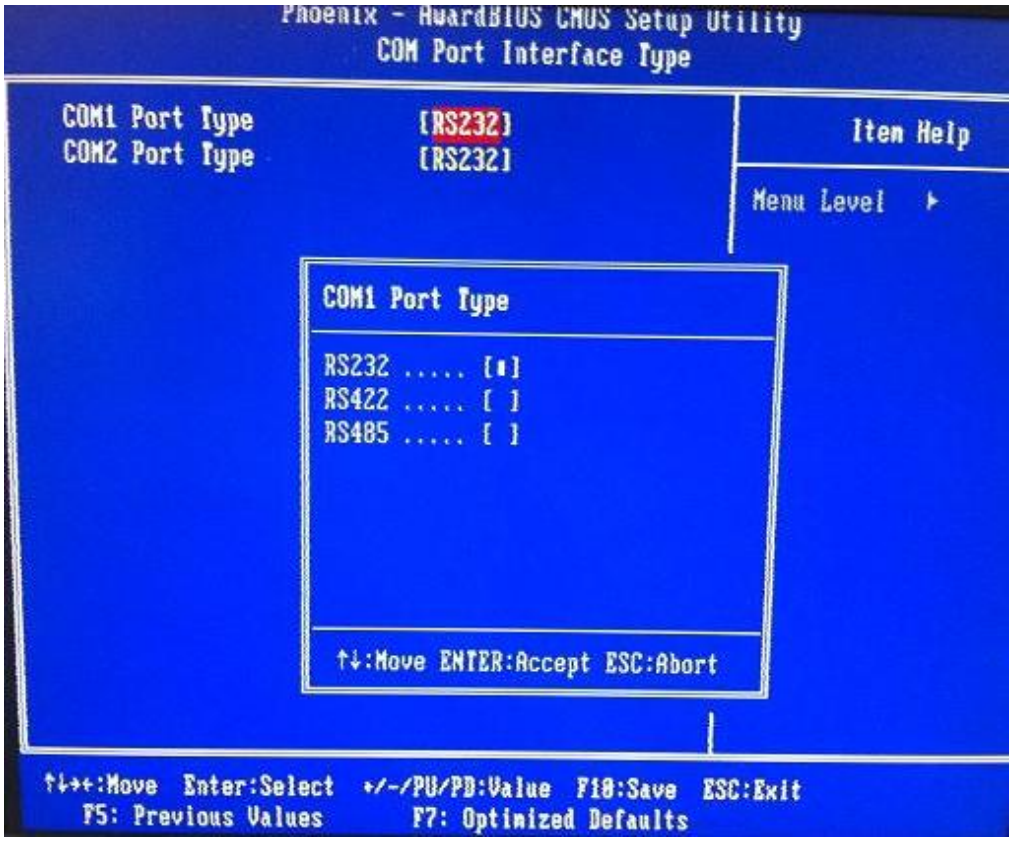
Phoenix - AwardBIOS CMOS Setup Utility
COM Port Interface Type
COM1 Port Type [RS232]
COM2 Port Type [RS232]
Item Help
Menu Level ▸
COM1 Port Type
RS232 ..... [■]
RS422 ..... [ ]
RS485 ..... [ ]
↑↓:Move ENTER:Accept ESC:Abort
↑↓→←:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit
F5: Previous Values F7: Optimized Defaults

- **USB Device Setting**

Scroll to this item and press <Enter> to view the sub menu USB Device Setting. Press <Esc> to return to the Integrated Peripherals page.

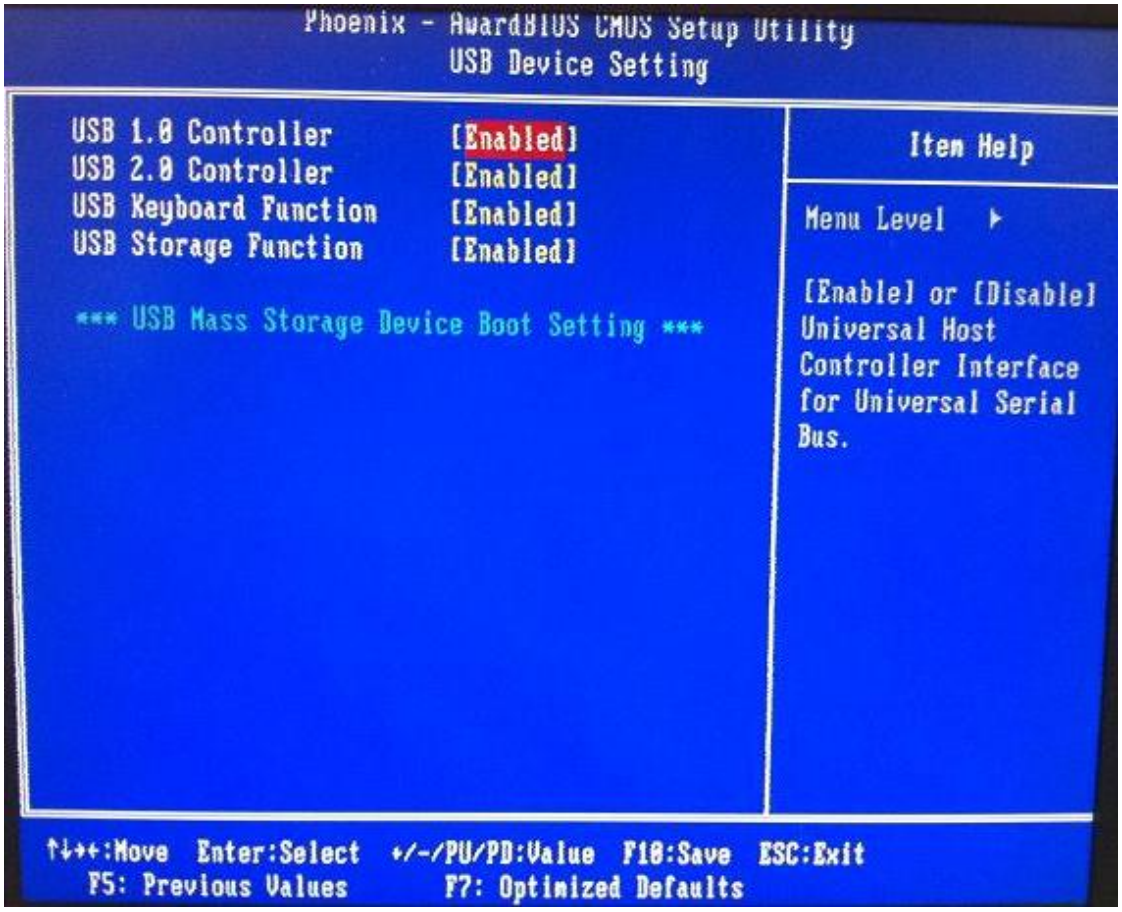
Phoenix - AwardBIOS CMOS Setup Utility
USB Device Setting
USB 1.0 Controller [Enabled]
USB 2.0 Controller [Enabled]
USB Keyboard Function [Enabled]
USB Storage Function [Enabled]
*** USB Mass Storage Device Boot Setting ***
Item Help
Menu Level ▸
[Enable] or [Disable] Universal Host Controller Interface for Universal Serial Bus.
↑↓→←:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit
F5: Previous Values F7: Optimized Defaults

- **Onboard Lan Boot ROM**

Use this item to enable or disable the Boot ROM function of the onboard LAN chip when the system boots up. Its default is *disable*.

3.8 Power Management Setup

The Power Management Setup allows you to save energy of your system effectively. It will shut down the hard disk and turn OFF video display after a period of inactivity.

- **ACPI Function**

Advanced Configuration and Power Management (ACPI).

The function is always "Enabled".

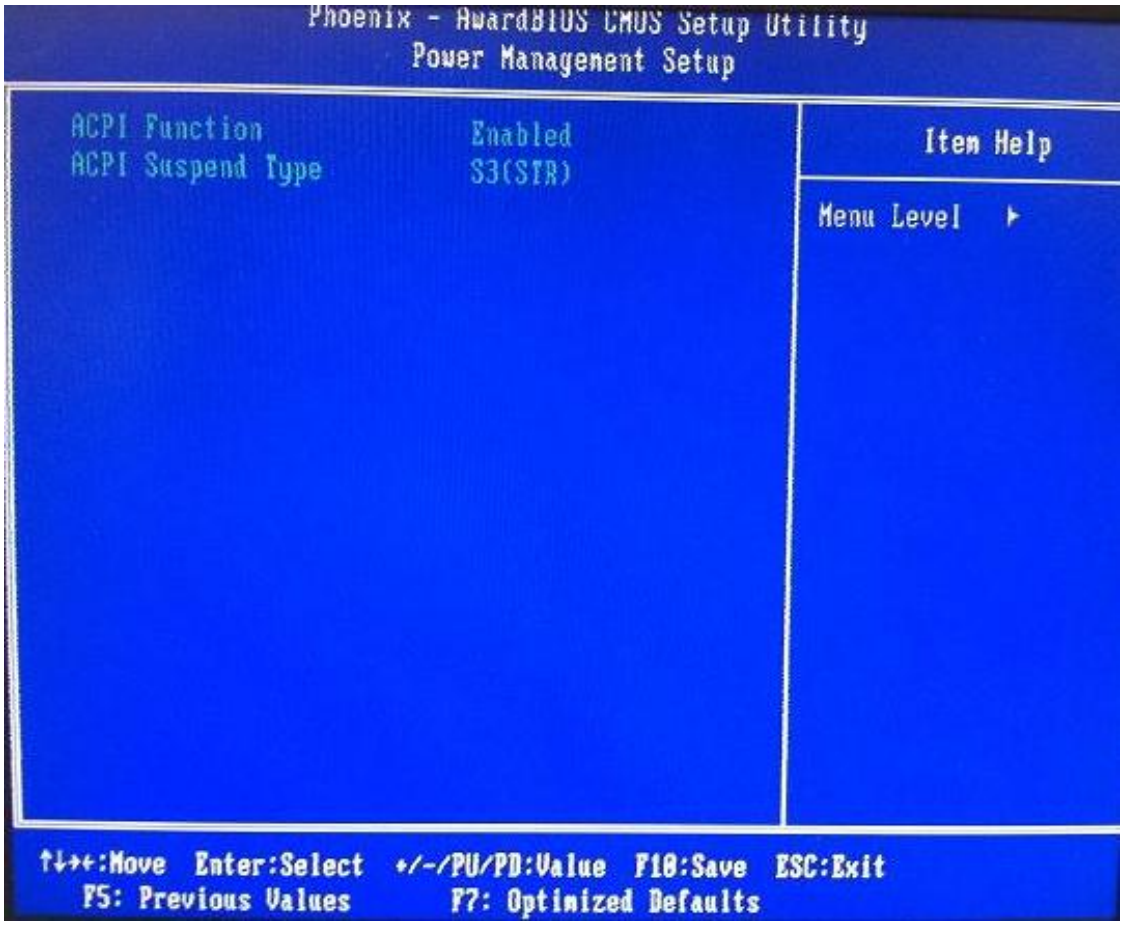

3.9 PnP/PCI Configuration Setup

This section describes the configuration of PCI (Personal Computer Interconnect) bus system, which allows I/O devices to operate at speeds close to the CPU speed while communicating with other important components. This section covers very technical items that only experienced users could change default settings.

- **Reset Configuration Data**

Normally, you leave this item Disabled. Select Enabled to reset Extended System Configuration Data (ESCD) when you exit Setup or if installing a new add-on cause the system reconfiguration a serious conflict that the operating system can not boot. Options: Enabled, Disabled.

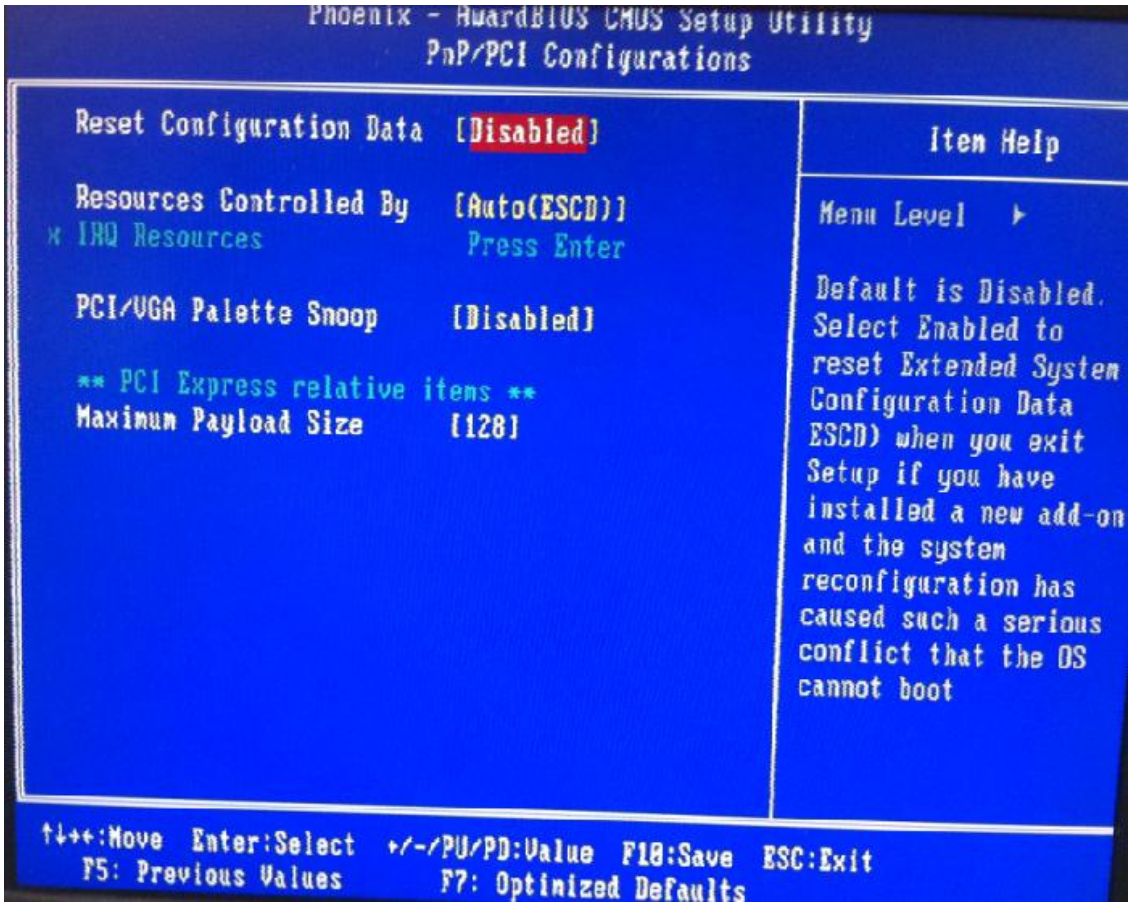
Phoenix - AwardBIOS CMOS Setup Utility
PnP/PCI Configurations
Reset Configuration Data [Disabled]
Resources Controlled By [Auto(ESCD)]
x IRQ Resources Press Enter
PCI/VGA Palette Snoop [Disabled]
** PCI Express relative items **
Maximum Payload Size [128]
Item Help
Menu Level ▸
Default is Disabled. Select Enabled to reset Extended System Configuration Data ESCD) when you exit Setup if you have installed a new add-on and the system reconfiguration has caused such a serious conflict that the OS cannot boot
↑↓→←:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit
F5: Previous Values F7: Optimized Defaults

- **Resources Controlled By**

The Award Plug and Play BIOS can automatically configure all boot and Plug and Play-compatible devices. If you select Auto, all interrupt request (IRQ), DMA assignment and Used DMA fields disappear as the BIOS automatically assign them. The default value is *"Auto"*. The other option is "Manual"

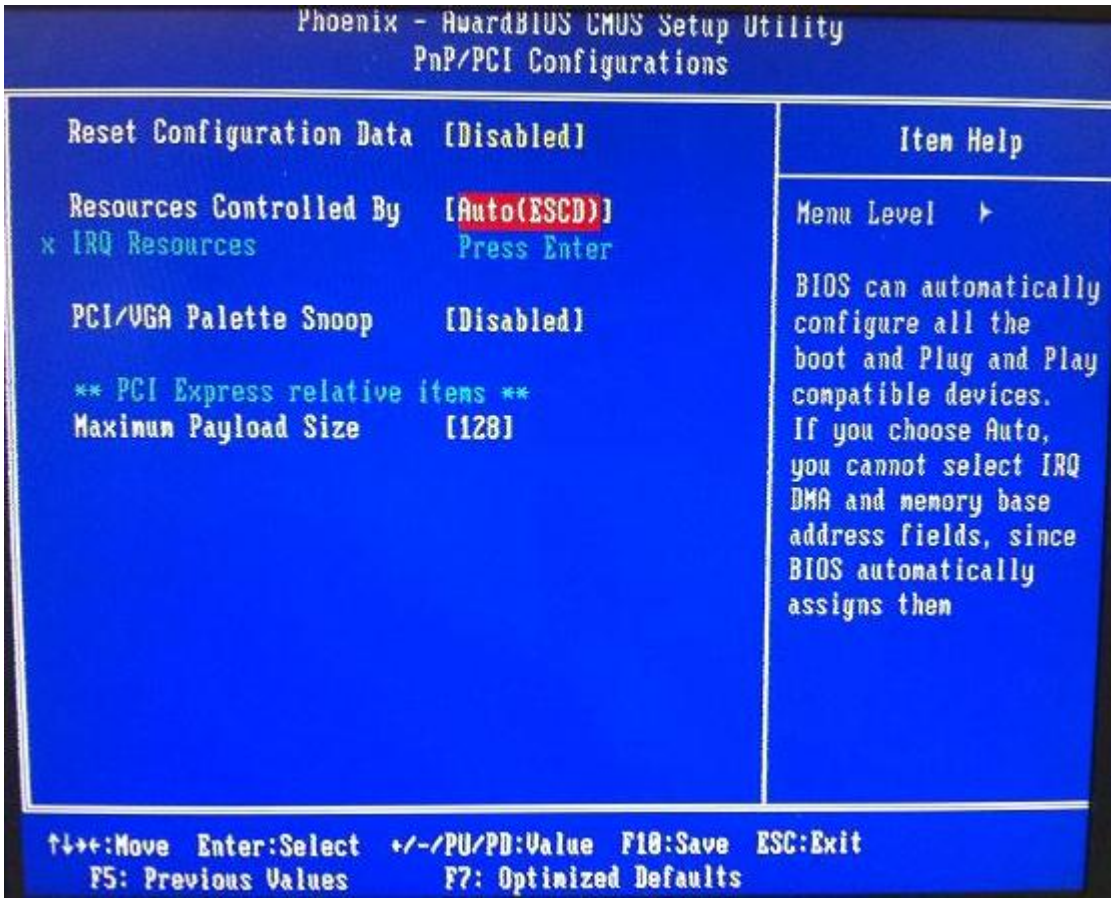
Phoenix - AwardBIOS CMOS Setup Utility
PnP/PCI Configurations
Reset Configuration Data [Disabled]
Resources Controlled By [Auto(ESCD)]
x IRQ Resources Press Enter
PCI/VGA Palette Snoop [Disabled]
** PCI Express relative items **
Maximum Payload Size [128]
Item Help
Menu Level ▸
BIOS can automatically configure all the boot and Plug and Play compatible devices. If you choose Auto, you cannot select IRQ DMA and memory base address fields, since BIOS automatically assigns them
↑↓→←:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit
F5: Previous Values F7: Optimized Defaults

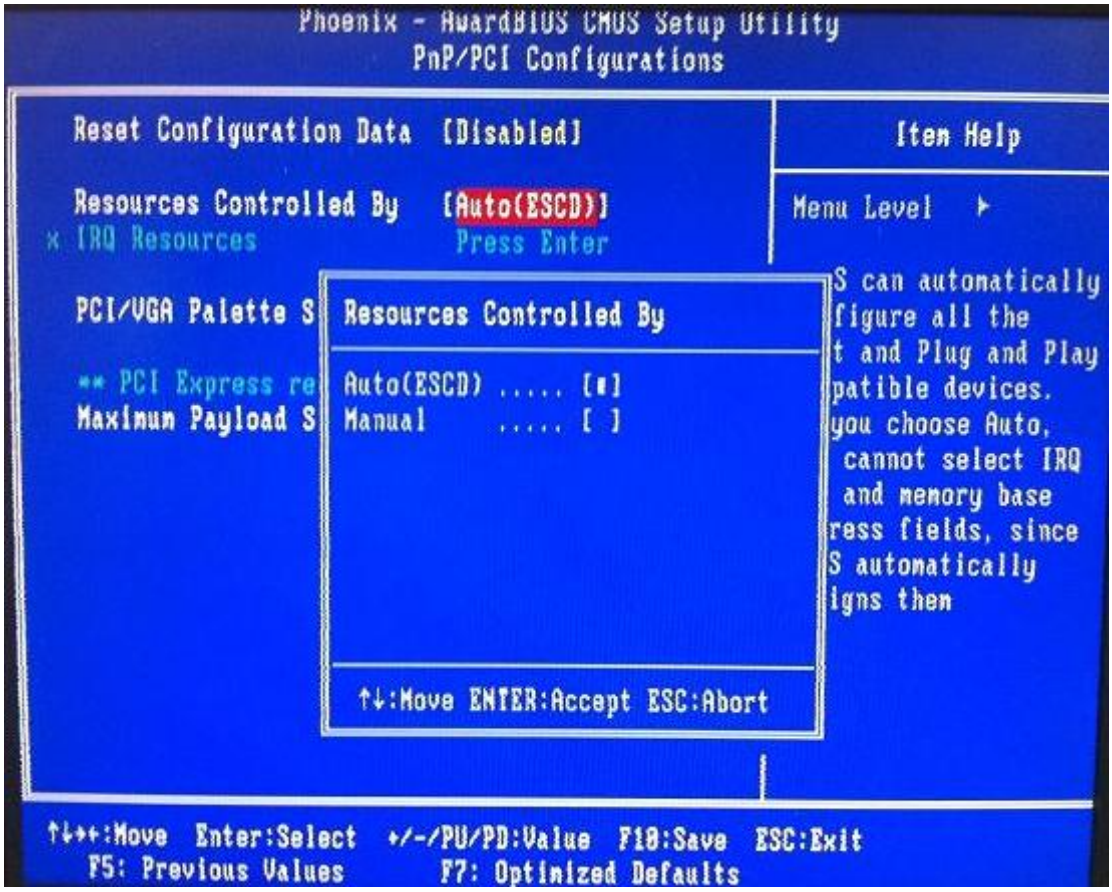
Phoenix - AwardBIOS CMOS Setup Utility
PnP/PCI Configurations
Reset Configuration Data [Disabled]
Resources Controlled By [Auto(ESCD)]
x IRQ Resources Press Enter
PCI/VGA Palette S
** PCI Express re
Maximun Payload S
Item Help
Menu Level ▸
S can automatically
figure all the
t and Plug and Play
patible devices.
you choose Auto,
cannot select IRQ
and memory base
ress fields, since
S automatically
igns then
Resources Controlled By
Auto(ESCD) ..... [*]
Manual ..... [ ]
↑↓:Move ENTER:Accept ESC:Abort
↑↓→←:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit
F5: Previous Values F7: Optinized Defaults

- **IRQ Resources**

When resources are controlled manually, assign each system interrupt to one of the following types in accordance with the type of devices using the interrupt:

1. Legacy ISA Devices compliant with the original PC AT bus specification, requiring a specific interrupt (such as IRQ4 for serial port 1).
2. PCI/ISA PnP Devices compliant with the Plug and Play standard,

whether designed for PCI or ISA bus architecture.The default value is "PCI/ISA PnP".

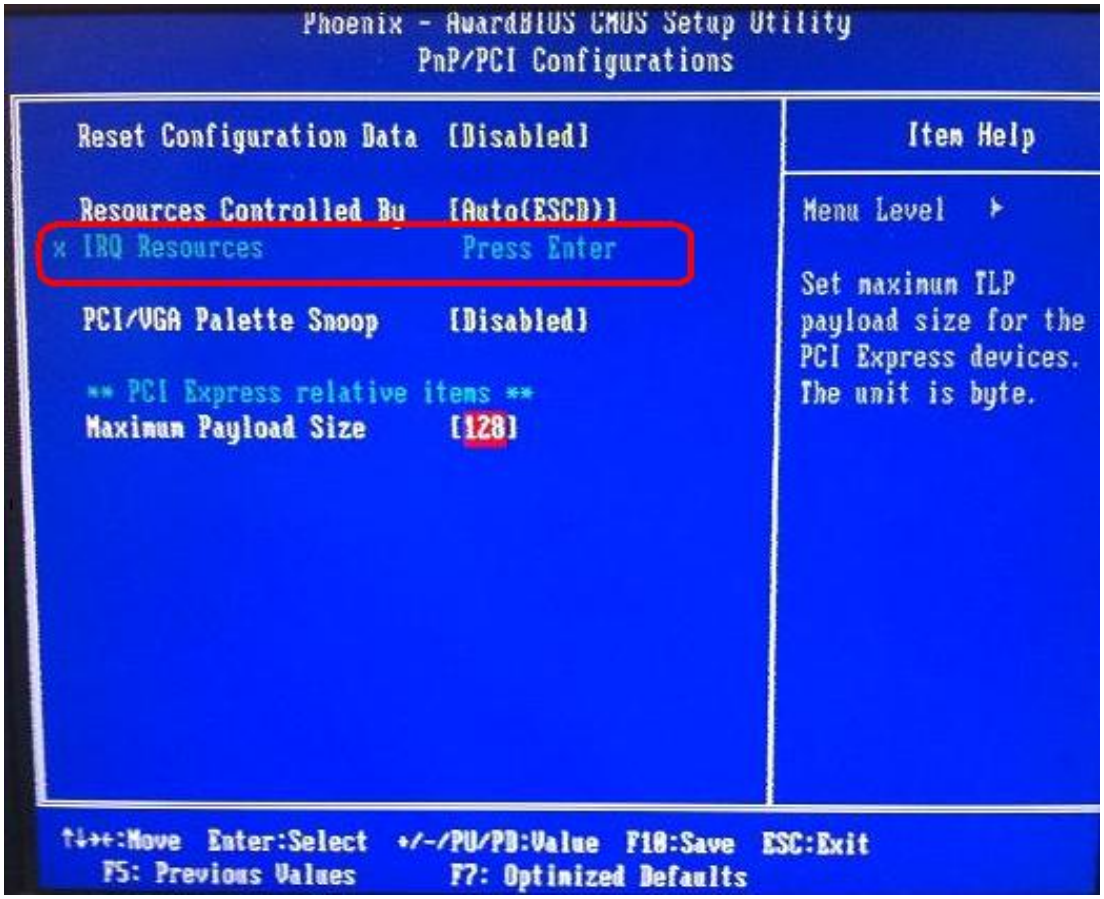
Phoenix - AwardBIOS CMOS Setup Utility
PnP/PCI Configurations
Reset Configuration Data [Disabled]
Resources Controlled By [Auto(ESCD)]
x IRQ Resources Press Enter
PCI/VGA Palette Snoop [Disabled]
** PCI Express relative items **
Maximum Payload Size [128]
Item Help
Menu Level ▸
Set maximun TLP payload size for the PCI Express devices. The unit is byte.
↑↓→←:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit
F5: Previous Values F7: Optimized Defaults

- **PCI/VGA Palette Snoop**

Some non-standard VGA display cards may not show colors properly. This item allows you to set whether MPEG ISA/VESA VGA Cards can work with PCI/VGA or not. When enabled, a PCI/VGA can work with a MPEG ISA/VESA VGA card; when disabled, a PCI/VGA cannot work with a MPEG ISA/VESA Card.

**** PCI Express relative items ****

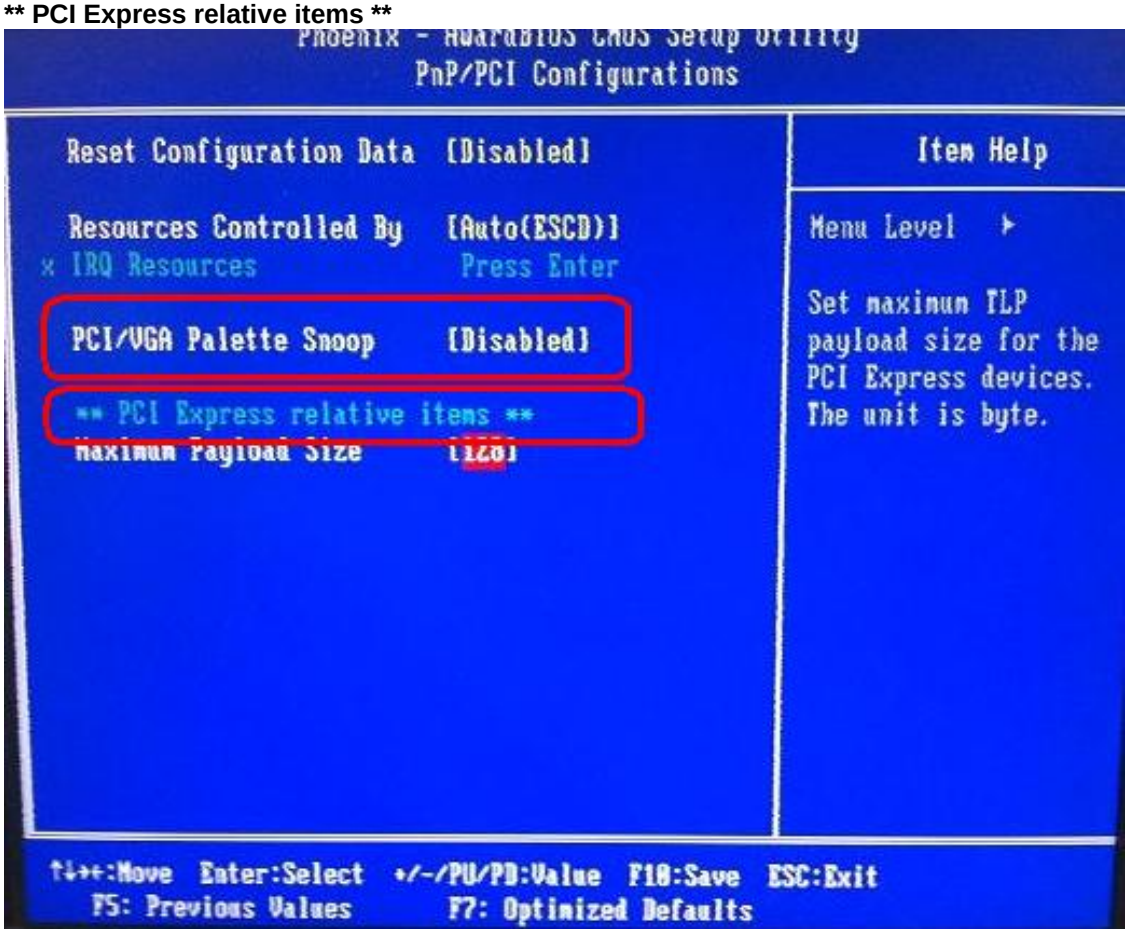
PnP/PCI Configurations
Reset Configuration Data [Disabled]
Resources Controlled By [Auto(ESCD)]
x IRQ Resources Press Enter
PCI/VGA Palette Snoop [Disabled]
** PCI Express relative items **
Item Help
Menu Level ▸
Set maxinun TLP payload size for the PCI Express devices. The unit is byte.
↑↓→←:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit
F5: Previous Values F7: Optimized Defaults

- **Maximum Payload Size**

When using DDR SDRAM and Buffer size selection, another consideration in designing a payload memory is the size of the buffer for data storage. Maximum Payload Size defines the maximum TLP (Transaction Layer Packet) data payload size for the device.

Press <Esc> to return to the Main Menu page.

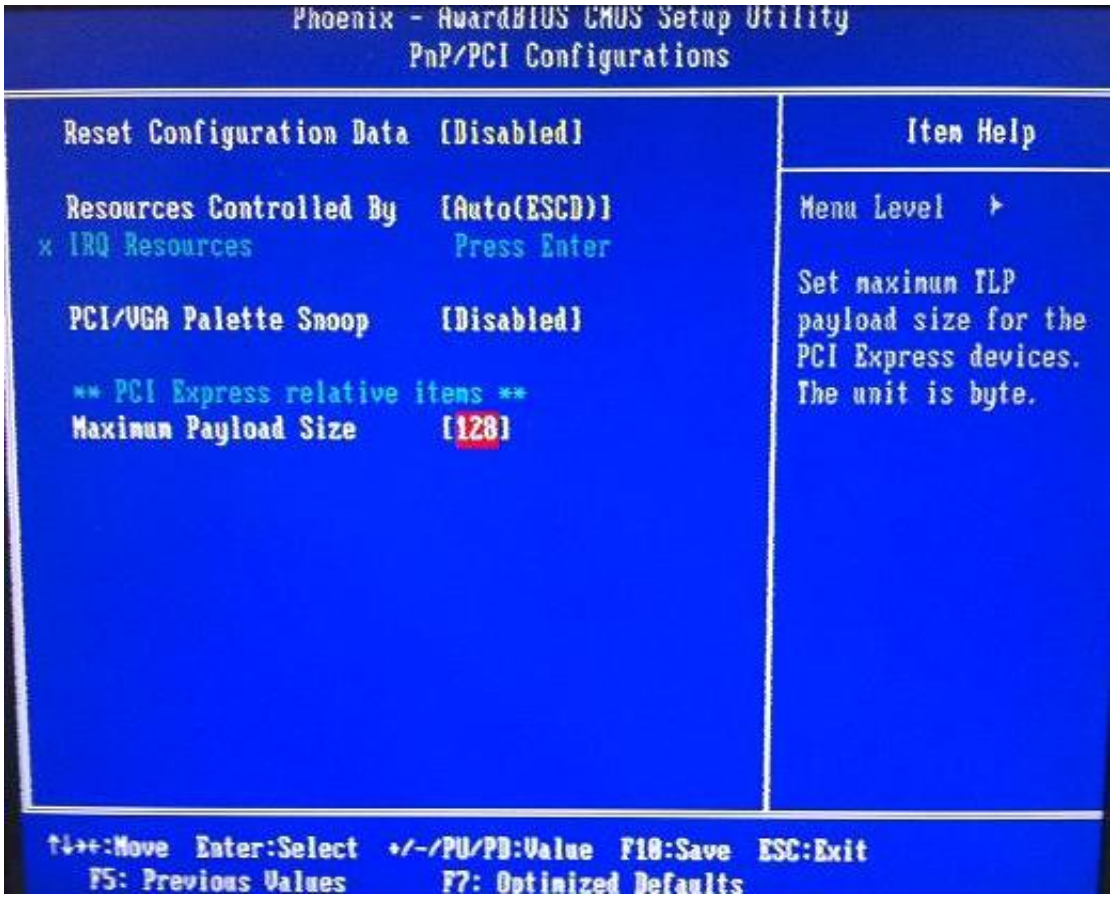
Phoenix - AwardBIOS CMOS Setup Utility
PnP/PCI Configurations
Reset Configuration Data [Disabled]
Resources Controlled By [Auto(ESCD)]
x IRQ Resources Press Enter
PCI/VGA Palette Snoop [Disabled]
** PCI Express relative items **
Maximum Payload Size [128]
Item Help
Menu Level ▸
Set maximun TLP payload size for the PCI Express devices. The unit is byte.
↑↓→←:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit
F5: Previous Values F7: Optimized Defaults

3.10 PC Health Status

This section supports hardware monitoring that lets you monitor those parameters for critical voltages, temperatures and fan speed of the board.

Press <Esc> to return to the Main Menu page.

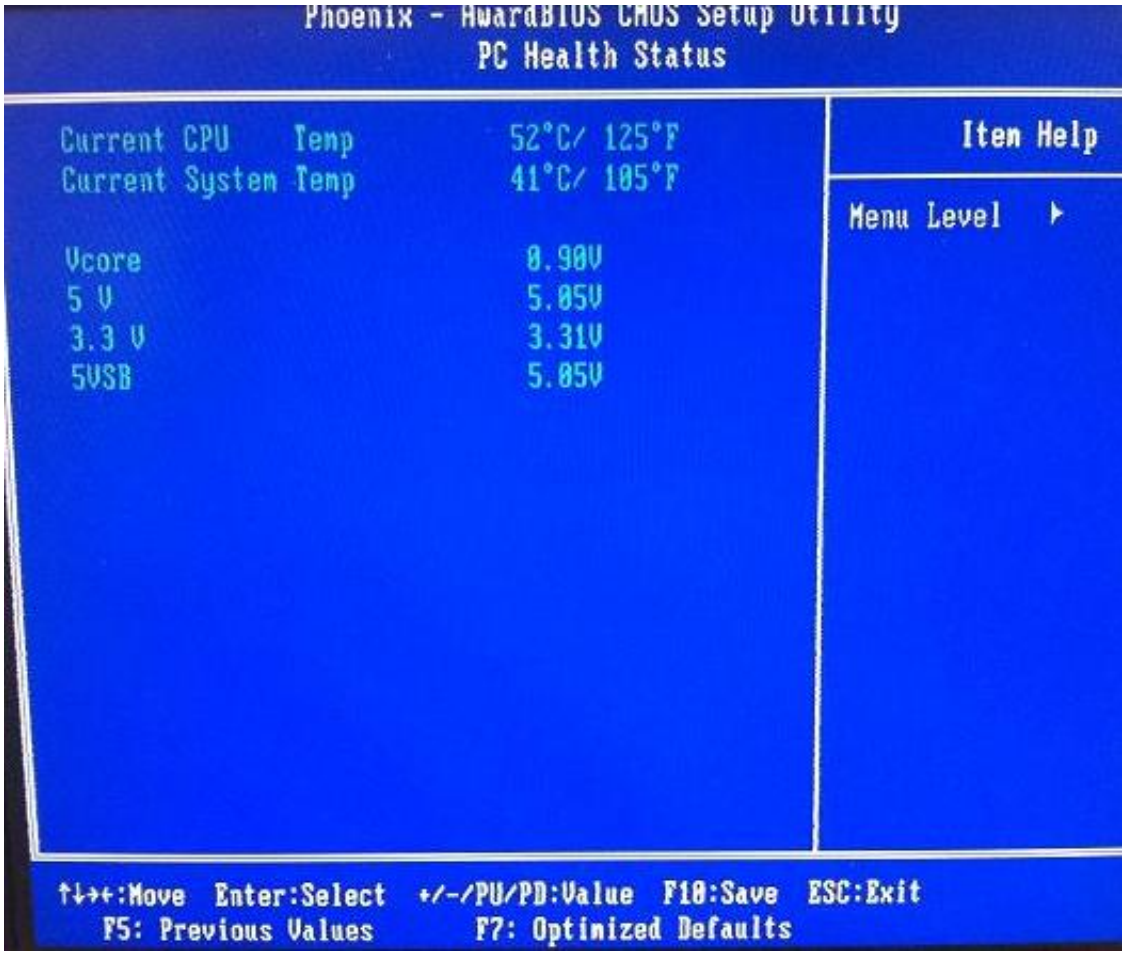

3.11 Load Optimized Defaults

This option allows you to load your system configuration with default values. These default settings are optimized to enable high performance features.

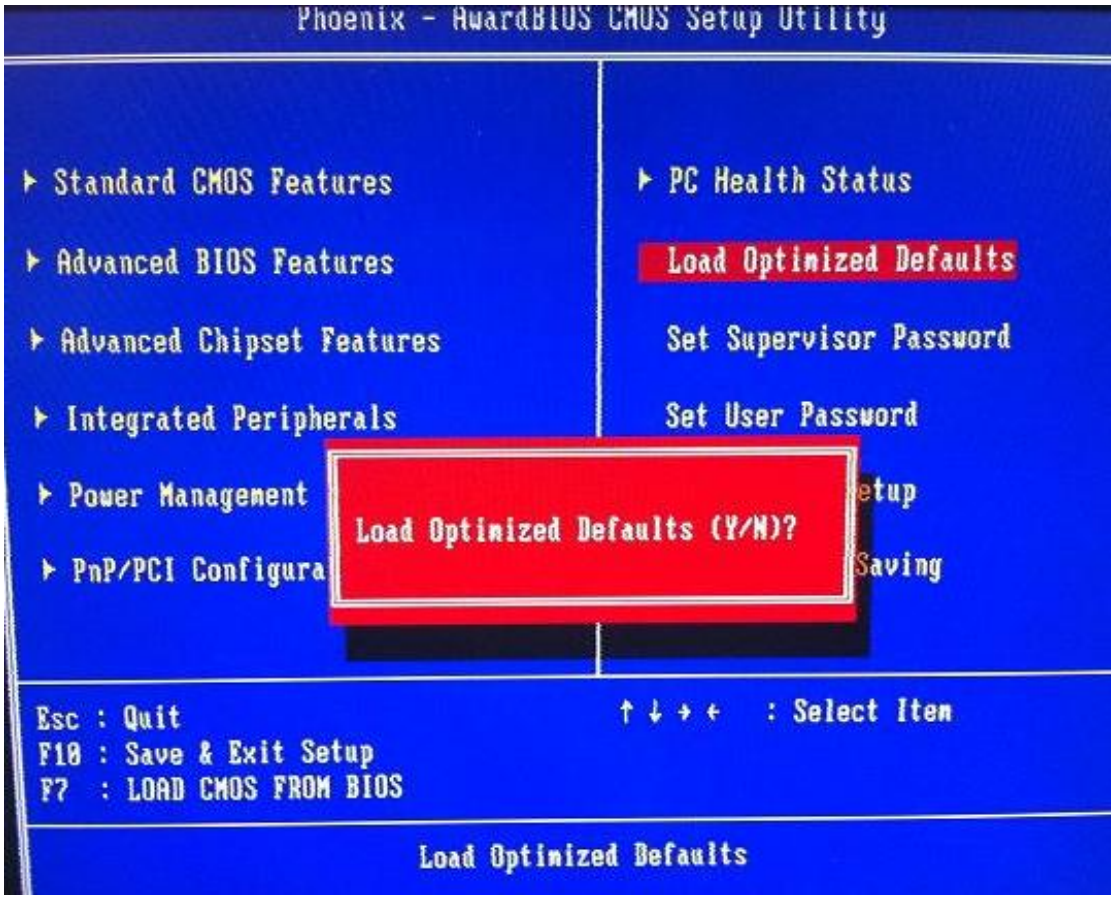

To load CMOS SRAM with SETUP default values, please enter "Y". If not, please enter "N".

3.12 Set Supervisor/User Password

You can set a supervisor or user password, or both of them. The differences between them are:

1. **Supervisor password:** You can enter and change the options on the setup menu.
2. **User password: You can just enter, but have no right to change the options on the setup menu.**

When you select this function, the following message will appear at the center of the screen to assist you in creating a password.

ENTER PASSWORD

Type a maximum eight-character password, and press <Enter>. This typed password will clear previously entered password from the CMOS memory. You will be asked to confirm this password. Type this password again and press <Enter>. You may also press <Esc> to abort this selection and not enter a password.

To disable the password, just press <Enter> when you are prompted to enter a password. A message will confirm the password is getting disabled. Once the password is disabled, the system will boot and you can enter Setup freely.

PASSWORD DISABLED

When a password is enabled, you have to type it every time you enter the Setup. It prevents any unauthorized persons from changing your system configuration.

Additionally, when a password is enabled, you can also require the BIOS to request a password every time the system reboots. This would prevent unauthorized use of your computer.

You decide when the password is required for the BIOS Features Setup Menu and its Security option. If the Security option is set to "System", the password is required during booting up and entry into the Setup; if it is set as "Setup", a prompt will only appear before entering the Setup.

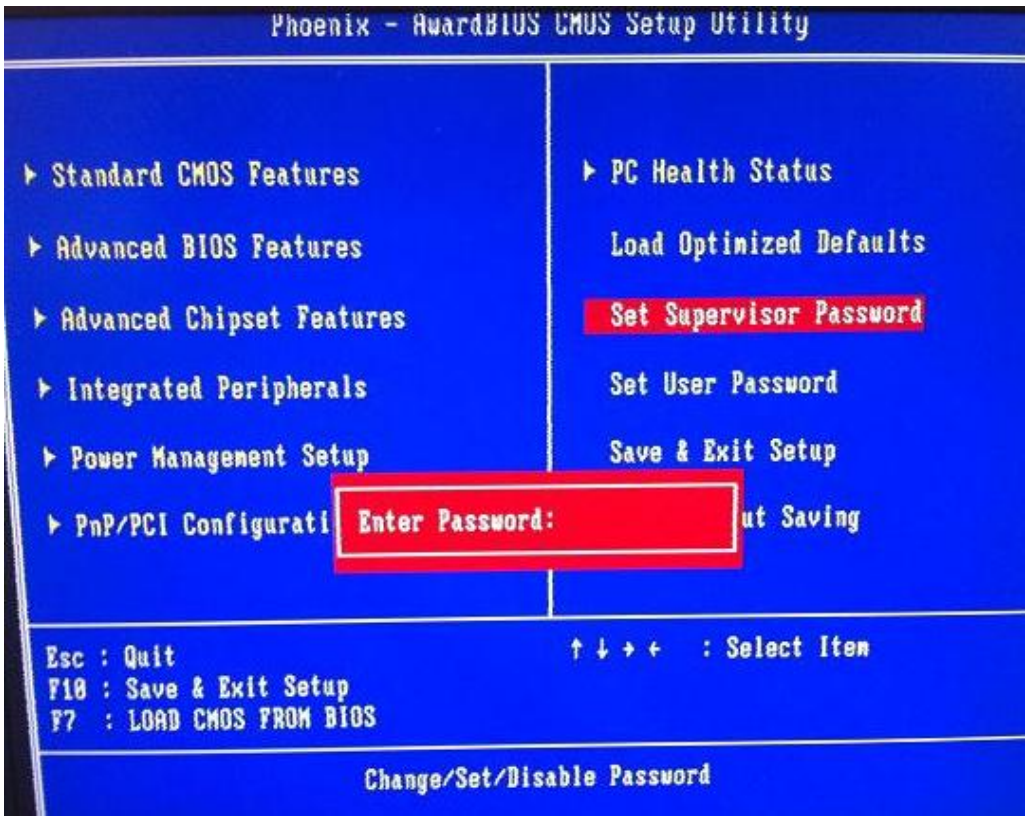
Phoenix - AwardBIOS CMOS Setup Utility
Standard CMOS Features
Advanced BIOS Features
Advanced Chipset Features
Integrated Peripherals
Power Management Setup
PnP/PCI Configurati
PC Health Status
Load Optimized Defaults
Set Supervisor Password
Set User Password
Save & Exit Setup
Enter Password:
ut Saving
Esc : Quit
F10 : Save & Exit Setup
F7 : LOAD CMOS FROM BIOS
↑ ↓ → ← : Select Item
Change/Set/Disable Password

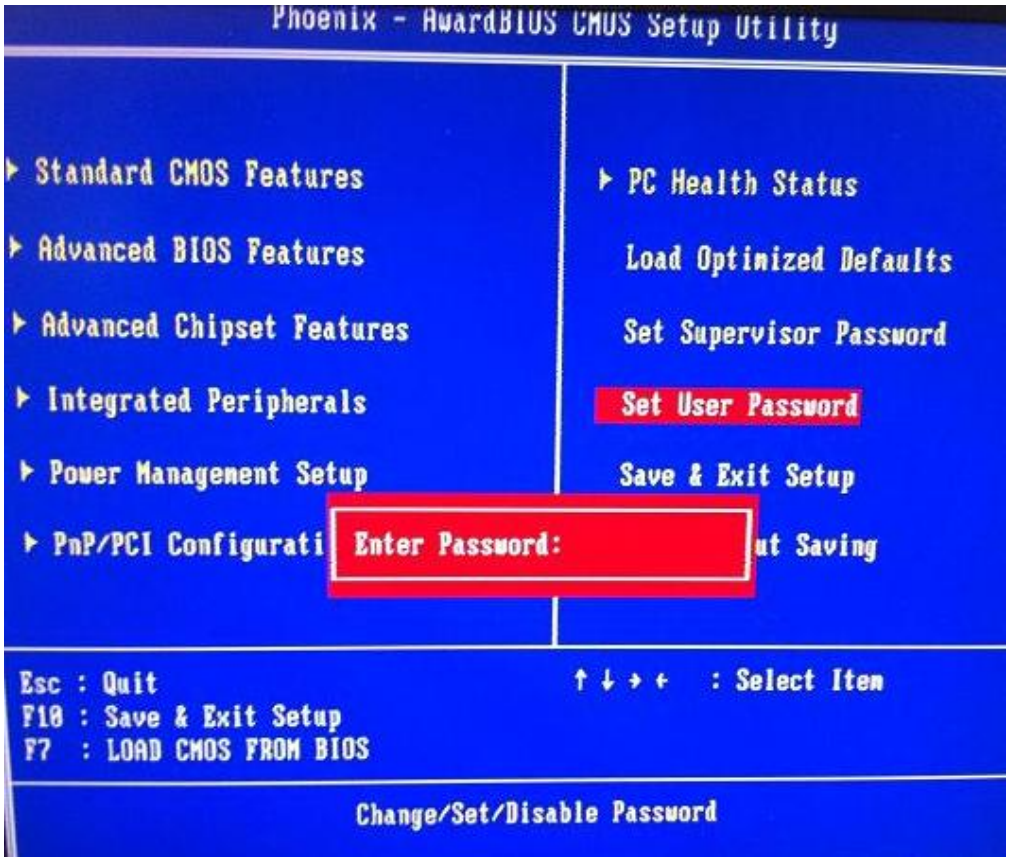
Phoenix - AwardBIOS CMOS Setup Utility
Standard CMOS Features
Advanced BIOS Features
Advanced Chipset Features
Integrated Peripherals
Power Management Setup
PnP/PCI Configurati
PC Health Status
Load Optimized Defaults
Set Supervisor Password
Set User Password
Save & Exit Setup
Enter Password:
ut Saving
Esc : Quit
F10 : Save & Exit Setup
F7 : LOAD CMOS FROM BIOS
↑ ↓ → ← : Select Item
Change/Set/Disable Password

3.13 Save & Exit Setup

This section allows you to determine whether or not to accept your modifications. Type "Y" to quit the setup utility and save all changes into the CMOS memory. Type "N" to bring you back to the Previous Setup utility.

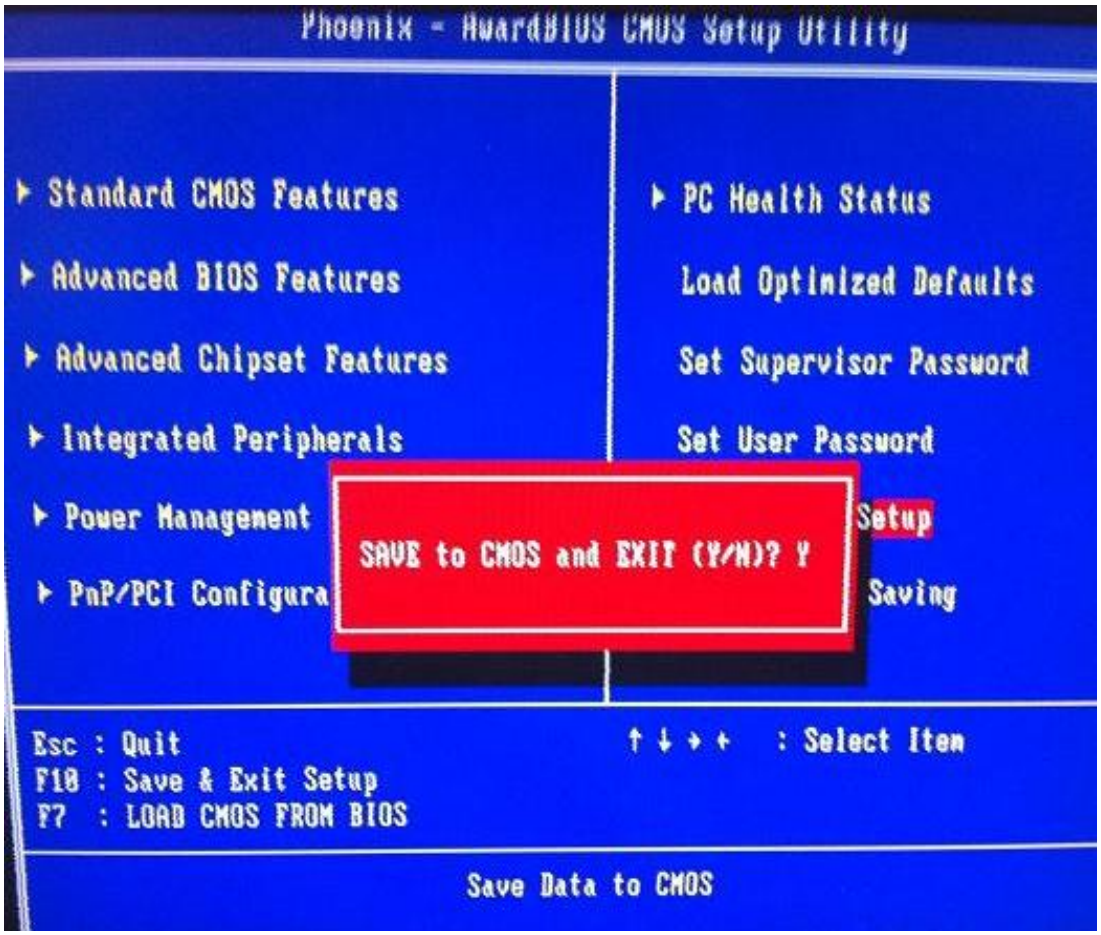

3.14 Exit Without Saving

Select this option to exit the Setup utility without saving changes you have made in this session. Type "Y", and it will quit the Setup utility without saving your modifications and come back to Previous Setup utility. Type "N" to return to the Setup utility.

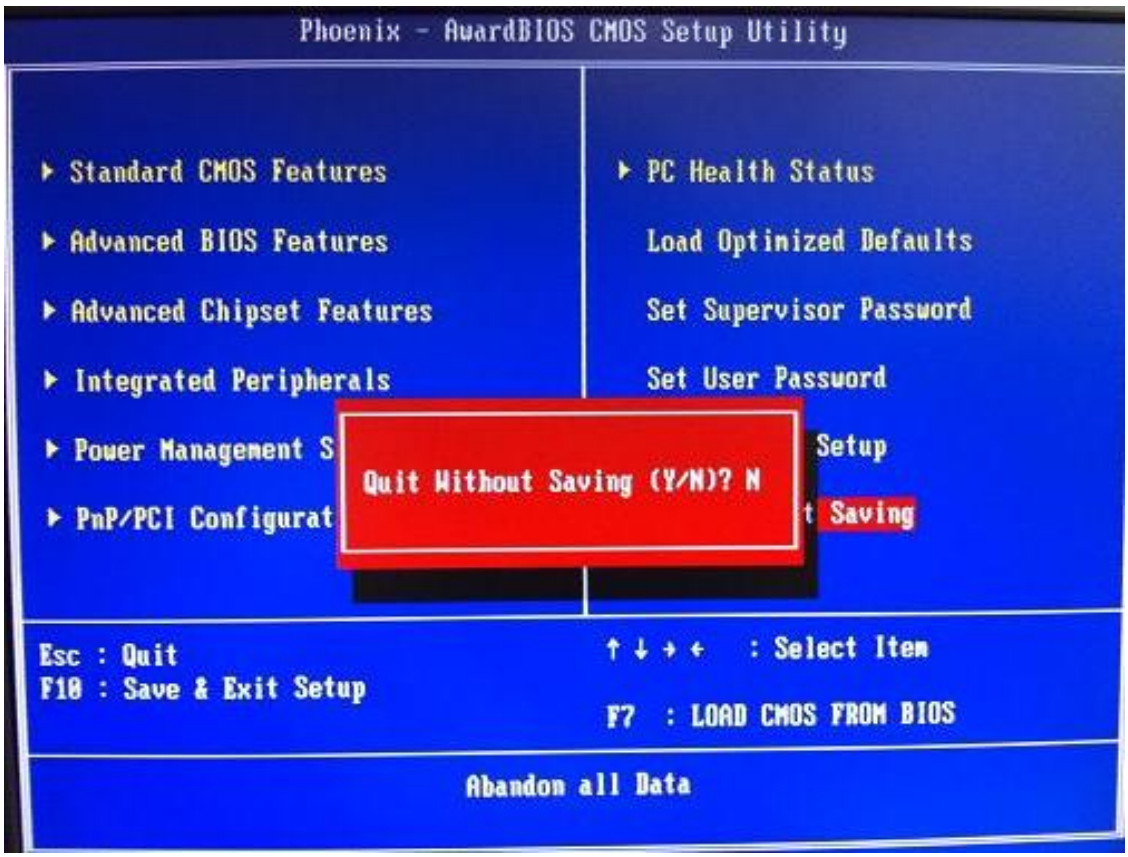

,

** Notice **

Two graphics drivers, but only one can be installed in the system.

- **Windows XP GMA 500 driver**

The default setting of display output under Windows XP GMA 500 driver is LVDS port.

If you only connect VGA port to install driver, please press **"Ctrl+Alt+F1"** to switch the display output to VGA port.

- **Windows XP IEGD driver**

The default setting of display output is VGA port.